

# Installation & Operation Manual

## Air Source Heat Pump Water Heater All-In-One Type



**MODEL:**

**VIVA200-1**

**VIVA270-1**

Thank you very much for purchasing our product, please keep this installation manual carefully and read this manual carefully before you install heat pump.

If there are any changes in product upgrades, specifications, or configurations, no further notice will be given. Please refer to the actual nameplate for accuracy.

All the pictures in this manual are for explanation purposes only.


---

## NOTES

Dear customers:

Thank you for selecting our products!

The manual is aim to let you learn more installation, operation and maintenance of heat pump water heater and provides some important safe information for you. It's quite required to carefully read the whole contents shown in this manual before you install and use heat pump, and please keep this installation manual carefully for purpose of future reference.

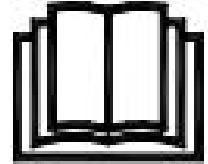

---

# CONTENT

<b>1 Note</b> .....	<b>1</b>
1.1 Safety instructions .....	1
1.2 Arrival inspection .....	3
1.3 Disclaimers .....	4
<b>2 Product information</b> .....	<b>5</b>
2.1 Product introduction .....	5
2.2 Operating principle .....	5
2.2.1 System composition .....	5
2.2.2 System principle of air source heat pump water heater .....	6
2.3 Naming rules .....	6
<b>3 Specification and performance</b> .....	<b>7</b>
3.1 Specification parameter .....	7
3.2 Performance curve .....	8
<b>4 General Information</b> .....	<b>10</b>
4.1 Appearances .....	10
4.2 Dimension .....	11
4.3 Exploded View .....	13
4.3.1 Appearance components .....	13
4.3.2 Water tank components .....	14
4.3.3 Host components .....	15
4.3.4 Electrical components .....	16
4.4 Appearance of main components .....	16
<b>5 Regular accessory</b> .....	<b>17</b>
<b>6 Installation requirements</b> .....	<b>18</b>
6.1 Installation location requirements .....	18
6.2 Installation space requirements .....	19
6.3 Transport .....	19
6.4 Installation and fixation .....	20
<b>7 Installation of water pipe</b> .....	<b>21</b>
7.1 Selection of water pipe material .....	21
7.2 Installation of water pipes .....	21
7.3 Insulation of water pipe .....	23
7.4 Pressure testing, anti-corrosion, and flushing .....	23
7.4.1 Pressure testing .....	23
7.4.2 Anti-corrosion .....	24
7.4.3 Flushing .....	24
7.5 PTRV .....	24
7.6 Condensate Water Drain .....	24

---

<b>8 Installation of electrical .....</b>	<b>26</b>
8.1 Connection of power cord and signal line .....	27
8.1.1 Specifications of power cord .....	27
8.1.2 Power cord wiring diagram .....	27
8.1.3 Signal line wiring diagram .....	28
8.2 Electrical wiring schematic .....	29
<b>9 Wire controller .....</b>	<b>30</b>
9.1 Controller Instruction .....	30
9.2 Instruction of the buttons .....	31
9.3 Operation Instruction .....	32
9.4 Wi-Fi Setting .....	33
9.5 Software Function Operation .....	38
9.6 Device Sharing .....	38
9.7 Operation Parameter Query .....	39
9.8 Fault code and solution .....	40
<b>10. Test operational .....</b>	<b>41</b>
10.1 Note .....	41
10.2 Confirmation items before test operational .....	41
10.3 Test operational .....	41
10.4 Operational requirements .....	43
10.5 Operation related instructions .....	43
10.5.1 Defrosting during heating operation .....	43
10.5.2 Regarding power outages .....	43
10.5.3 Regarding leakage current action protectors .....	43
10.5.4 Regarding the power-off memory function .....	43
<b>11. Maintenance and solution .....</b>	<b>44</b>
11.1 Maintenance .....	44
11.2 Information for service personnel .....	44
11.3 Repairs to sealed components .....	46
11.4 Repair to intrinsically safe components .....	46
11.5 Cabling .....	46
11.6 Detection of flammable refrigerants .....	47
11.7 Leak detection methods .....	47
11.8 Removal and evacuation .....	47
11.9 Charging procedures .....	47
11.10 Decommissioning .....	48
11.11 Labelling .....	48
11.12 Recovery .....	48
11.13 Error&Approaches .....	49

---

# 1 Note

## 1.1 Safety instructions

This part provides quite important safe points for you and please operate it based on safety precautions.



**Danger - Any of the following situations must be prohibited, otherwise it may cause serious personal injury and even pose a direct risk of death:**

1. It is strictly prohibited to install the unit without reading the installation & operating manual.
2. It is strictly prohibited to touch or modify the components inside the unit without authorization.
3. This appliance uses **R290** which is colorless, odorless, and flammable, it is prohibited to inject other types of refrigerant .
4. It is strictly prohibited to connect the ground wire to neutral wire of the power supply ,gas pipelines, water supply and drainage pipelines, lightning rods, telephone lines, etc.
5. It is strictly prohibited to pour water inside the appliance.
6. It is strictly prohibited to open the maintenance cover or wire box cover of the appliance without disconnecting the power.
7. It is strictly prohibited to install the appliance in areas with high levels of oil mist, flammable gases, salt mist, or toxic gases.
8. It is strictly prohibited to dismantle any permanent instructions, labels, or nameplates inside the appliance casing or various panels.



**Warning - All the following situations must be strictly followed, otherwise it may cause personal injury, and even lead to the risk of death or unsafe**

1. Before installation, it should be confirmed that the voltage of the power grid is the same as the voltage required by the appliance, and whether the carrying capacity of the wires and sockets meets the maximum power requirements.
2. Do not use insecticide, paint, hair gel or other combustible gases within 1m around the appliance.
3. When brazing, ensure that there are no combustible materials around. When using refrigerant, please wear gloves to prevent frostbite.
4. Please entrust dealer or professional personnel to install it; Installation personnel must have

---

relevant professional knowledge and be able to install on their own. Improper operation can lead to water leakage, fire, electric shock, injury, etc.

5. Household electric must have a reliable ground connection. When connecting to the power supply, please follow the regulations of the local power company and confirm .



6. Ensure that other accessories purchased locally meet the usage requirements of our products.
7. The power supply wiring must be equipped with a leakage protector, with a rated current value not lower than the high operating current of the appliance. The grounding must be reliable, kept dry, and prevent leakage. Please make sure to check if the wiring is in good condition. If the contacts are poor, it can cause the equipment to overheat, burn, and even cause personal injury accidents.
8. Ensure that the place on which the appliance is placed has sufficient strength, otherwise the machine may fall.
9. The installation height of the power socket should not be less than 1.8 meters where water may splash onto walls, and ensure that water does not splash onto the socket, and should not be installed in areas where children may reach.
10. Please install the appliance in a place that can self drain.
11. If the components of appliance are damaged, please perform professional repairs and use the special repair parts provided by the company.
12. When abnormal (burning odor) occurs, the manual power switch should be immediately cut off, the operation should be stopped, and the manufacturer's after-sales service department should be contacted. If abnormal work continues, it may cause electric shock.
13. If a fire occurs, the power should be cut off immediately.
14. Refrigerant leakage can cause difficulty breathing. If you discover a refrigerant leak, immediately turn off the main switch, extinguish any open flames, and contact your dealer.
15. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and

---

user maintenance shall not be made by children without supervision.

16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. The appliance shall be installed in accordance with national wiring regulations.
18. An all-pole disconnection device which has at least 3mm clearances in all poles , and have a leakage current that may exceed 10mA, the residual current device (RCD) having a rated residual operating current not exceeding 30mA, and disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.




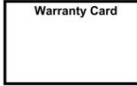




**Attention - All the following situations must be followed, otherwise it may be a danger or unsafe situation of personal injury, product damage, and economic damage:**

1. This manual should be considered as a part of the unit, please keep it properly.
2. Minors should use this product under the guidance of adults.
3. Do not install the unit within 3 meters around the unit with strong electromagnetic radiation.
4. The unit should be placed in a firm and flat place without tilting.
5. Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
6. The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater.)

## 1.2 Arrival inspection

**After receiving the product, please follow the following steps to inspect the product upon arrival:**

1. Check the outer package: Confirm that there is no damage, deformation, moisture or other phenomena on the outer packaging, and that the seal is intact and undamaged. If there are any issues, please do not open the package and contact your local dealer in a timely manner.
2. Check the product: After opening the package, check whether the product is intact and has any obvious physical damage. Also, verify that the product model, color, quantity, etc. are consistent with the order. If there are any issues, please contact your local dealer in a timely manner.
3. Testing product functions: Conduct a simple test on the various functions of the product according to the instructions on the product manual to ensure that the product works properly. If there are any problems, please contact your local dealer in a timely manner.
4. Check accessories: Please confirm that all accessories are complete and free from any missing or damaged items according to the contents listed in the table below. If there are any issues, please contact your local dealer in a timely manner.

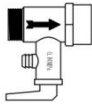NO.	Name	Shape	Quantity
1	Installation & operation manual		1
2	Warranty Card		1
3	Hose Clamp		2
4	Hose		1
5	Drainage joint		1
6	Pressure & Temperature Relief Valve (PTRV)		1

### 1.3 Disclaimers

1. This product must be powered independently using copper-core power cords with a required wire diameter. The unit requires a reliable grounding wire. The manufacturer is not responsible if the wiring does not meet the requirements and the unit cannot work properly.
2. When cleaning the unit, it is necessary to stop the unit and turn off the power switch; if the unit is powered on for cleaning, resulting in electric shock or personal injury, the manufacturer will not be responsible.
3. In winter or when the ambient temperature is below 2 °C, if the machine is stop for a long time without use, Please make sure to empty the water pipes and tanks to prevent water from freezing, expanding, damaging the pipes and tanks, and damaging the unit. If the unit is frozen or damaged due to power outage, or if the anti freeze protection of the unit is stopped, the manufacturer will not be responsible.

---

## 2 Product information

### 2.1 Product introduction

Air source heat pump is one of the best equipment to utilize new energy, it is also a new generation of hot water production equipment, following boiler, gas water heater, electric water heater, and solar water heater. Due to the increasingly tight energy supply, and the vigorous promotion of the "carbon reduction" policy, air source heat pump units have quickly been promoted in the market due to their many advantages such as high efficiency, energy conservation, environmental protection, and safety.

All in one heat pump for sanitary hot water :

1. It has complete isolation between water and electricity, without electric shock problem, more safety;
2. No fuel tubes and storage, no potential danger from oil leakage, fire, explosion, and so on;



3. No cross contamination potential, the condenser coil is wrapped around the stainless tank, it is external coil, do not come in contact with water directly, more safety and healthy;
4. The maximum outlet water temperature: 75°C. The system makes the water be heated stably and quickly with innovative heating methods of combination the electric heating and heat pump heating ;
5. Automatic start-up and shutdown, automatic defrosting by revising refrigerant cycle to save the extra operation;
6. Within the temperature range from -7 °C to 43 °C, the unit will not be affected by night, cloudy sky, rain even snow weather;


### 2.2 Operating principle

#### 2.2.1 System composition


Air source heat pump water heater consists of compressor, water tank, evaporator, 4-way valve, heat exchanger micro-channel, EEV and so on.

## 2.2.2 System principle of air source heat pump water heater

NO.	Name
1	Compressor
2	4-way valve
3	heat exchanger micro-channel
4	water tank
5	Filter 1
6	Electronic Expansion Valve
7	Filter 2
8	Evaporator
9	Fan
10	Hot water outlet
11	Cold water inlet
T1	Coil temp. sensor
T2	Ambient temp . sensor
T3	Exhaust temp.sensor
T5	Suction temp. sensor
P1	High-pressure switch

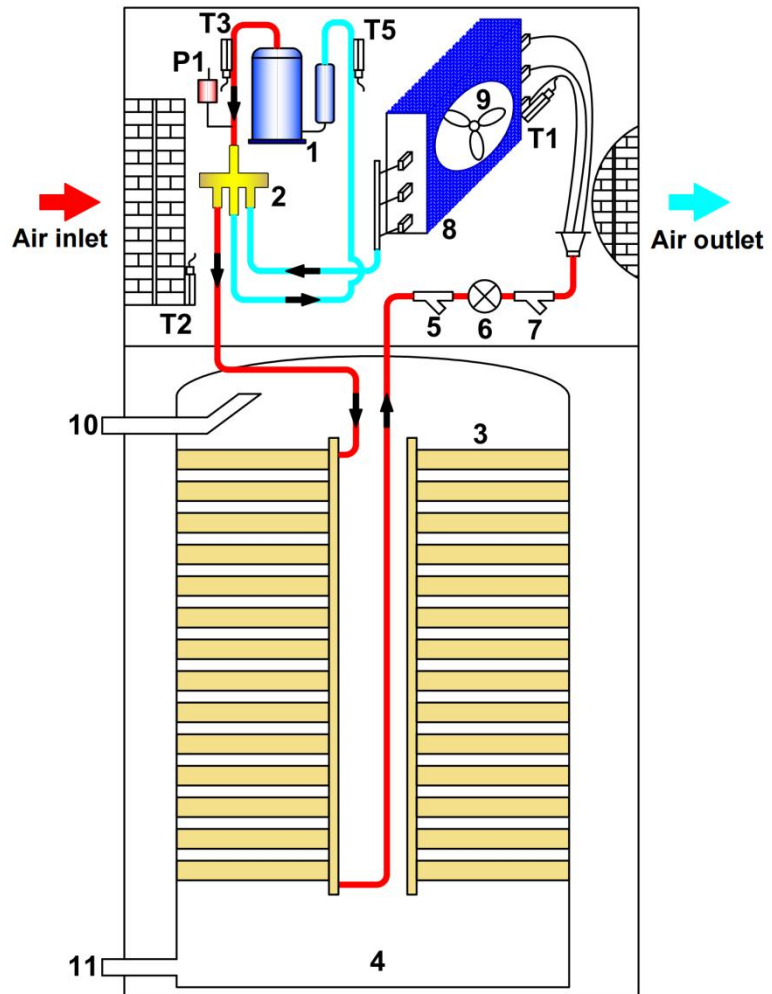

## 2.3 Naming rules

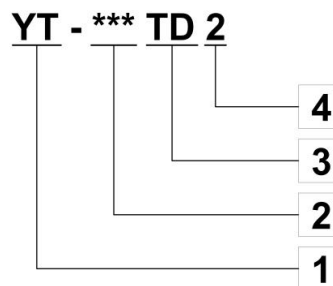

- 1**--Appliance type code, "YT" stands for All-In-One Air Source Heat Pump Water Heater;
- 2**--Water tank capacity, "200" stands for 200L, "270" stands for 270L;
- 3**--Appliance exterior code;
- 4**--Type of refrigerant, "2" stands for R290.




# 3 Specification and performance

## 3.1 Specification parameter

Model	VIVA200-1	VIVA270-1
Power supply	220V~240V/50HZ	220V~240V/50HZ
Rated Input Power(Heat pump)	611W	611W
Rated Input Current(Heat pump)	2.71A	2.71A
Rated Heating Capacity(Heat pump)	3037W	3037W
Rated Input Power(Resistance)	1800W	1800W
Rated Input Current(Resistance)	8A	8A
Max Current(HP&Resistance)	8.2A	8.2A
Max Input Power(HP&Resistance)	1800W	1800W
Water tank volume	200L	270L
Recovery Rates (lires per hour)	60	60
COP(A 20/15,W 15-46)	4.97	4.97
STC	33	33
Refrigerant	R290 (400g)	R290 (400g)
Compressor	GMCC/Rotary	GMCC/Rotary
Expansion valve	EEV	EEV
Fan	Axial	Axial
Heat exchanger	Microchannel /Wrap around tank	Microchannel /Wrap around tank
Inner tank material	Enamel	Enamel
Inner tank thickness	Dome 3.0mm /Wall 2.5mm	Dome 3.0mm /Wall 2.5mm
Inner tank type	Concave	Concave
Insulation /thickness	Polyurethane /40mm	Polyurethane /40mm
PTR valve	850KPA	850KPA
Rated Outlet Water Temperature	60°C	60°C
Max Outlet Water Temperature	75°C	75°C
Working range with element	-15°C~43°C	-15°C~43°C
Working range without element	-7°C~43°C	-7°C~43°C
IP Class	IPX4	IPX4
Electric Shock Proof	I	I
Unpacked Dimension (outdoor unit)	φ620mm*1510mm	φ620mm*1830mm
Packed Dimension (outdoor unit)	700*700*1667mm	700*700*1987mm
Net Weight	104KG	118KG
Gross Weight	120KG	135KG
Noise	43dBA	43dBA

### 3.2 Performance curve



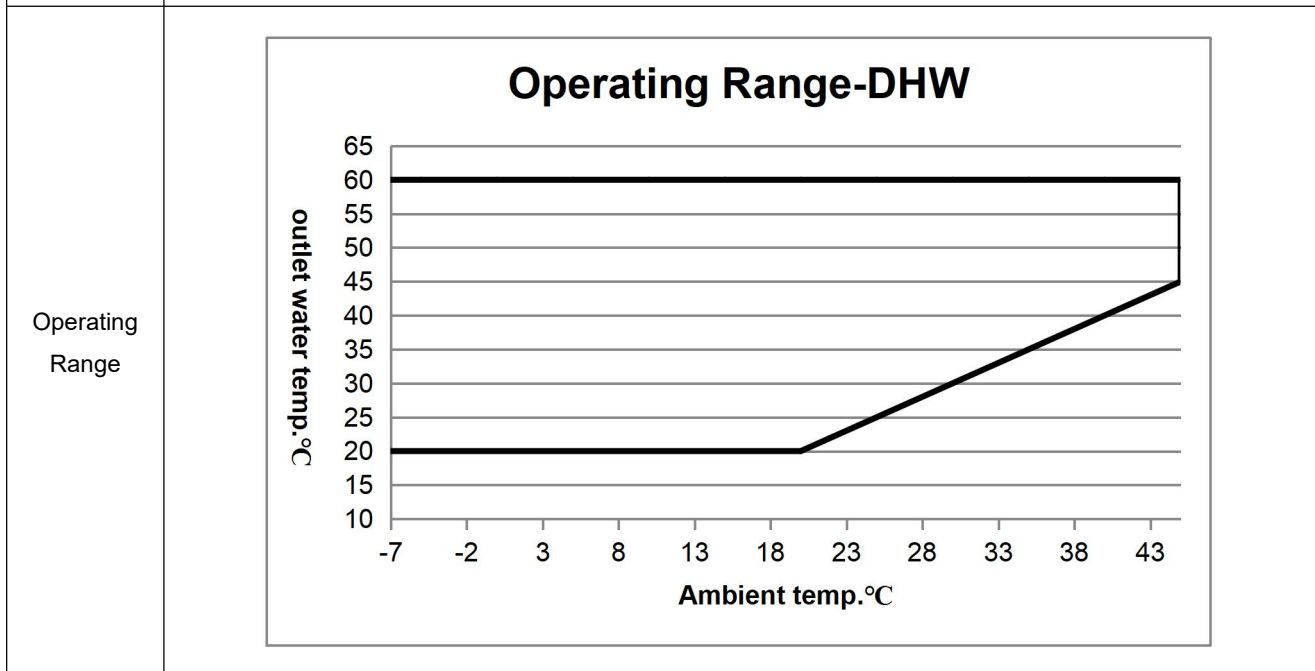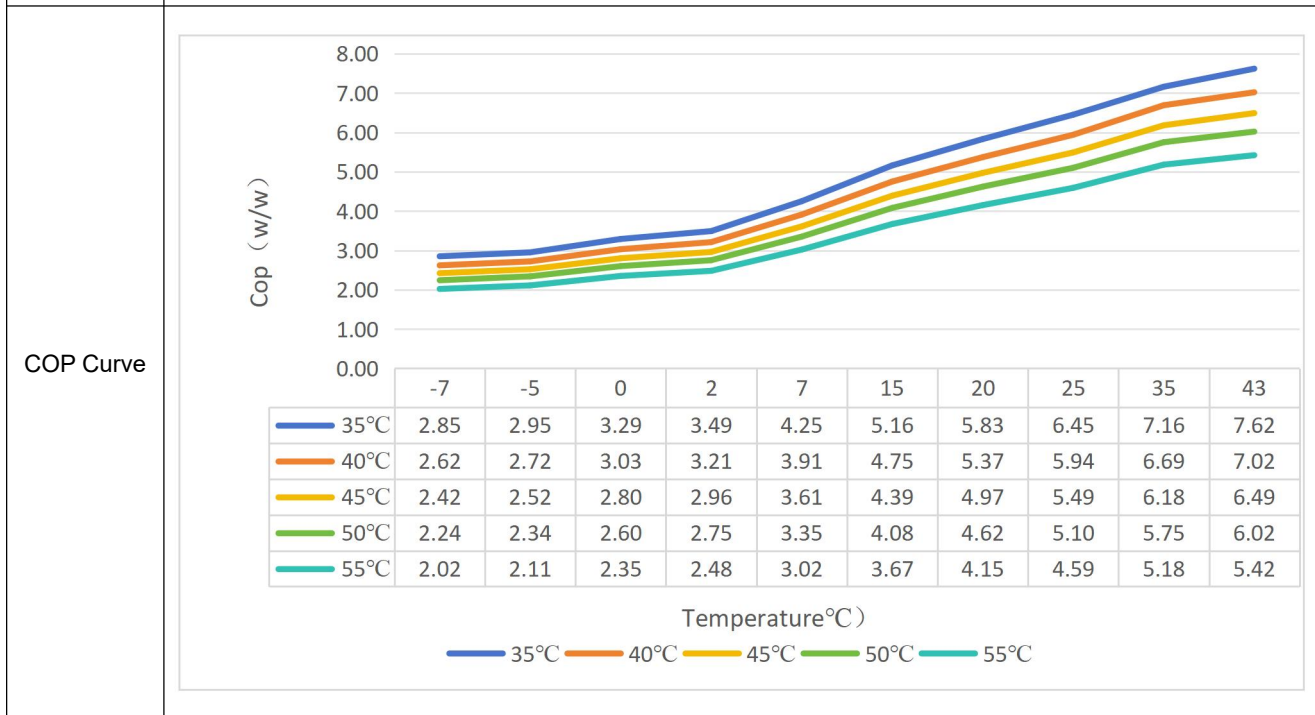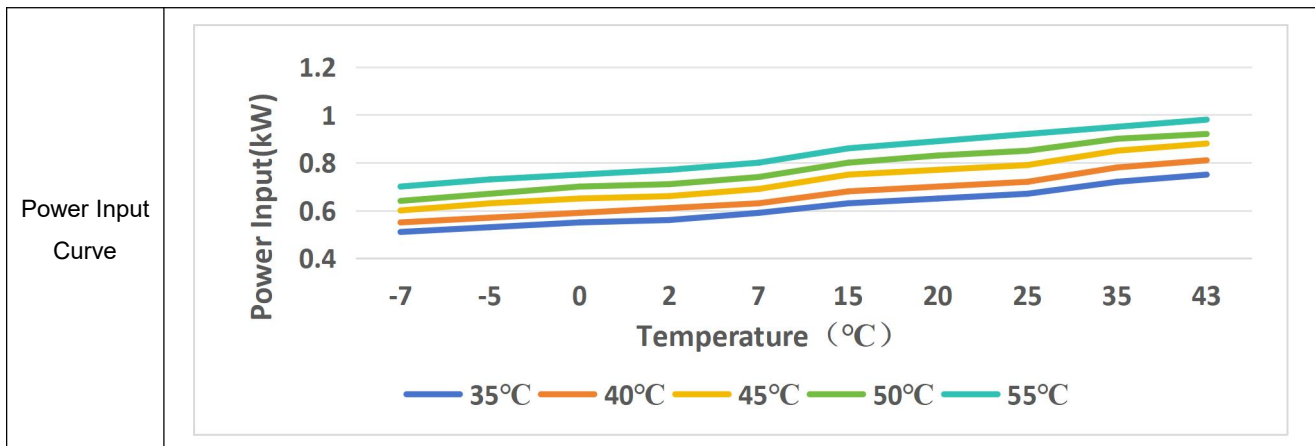

---

## 4 General Information

### 4.1 Appearances



**Front view**




**Back view**

---

## 4.2 Dimension


Unit:mm

Model	VIVA200-1	VIVA270-1
A	Φ620	Φ620
B	1555	1875
C	100	100
D	780	1100
E	130	130

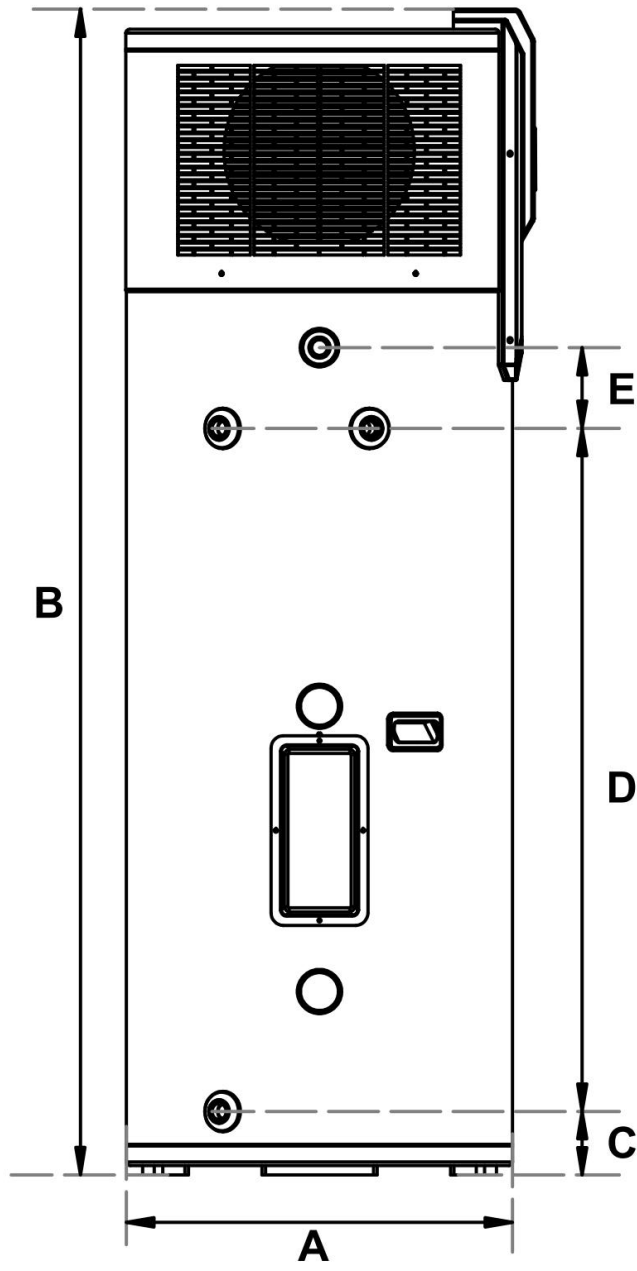


## 4.3 Exploded View

### 4.3.1 Appearance components

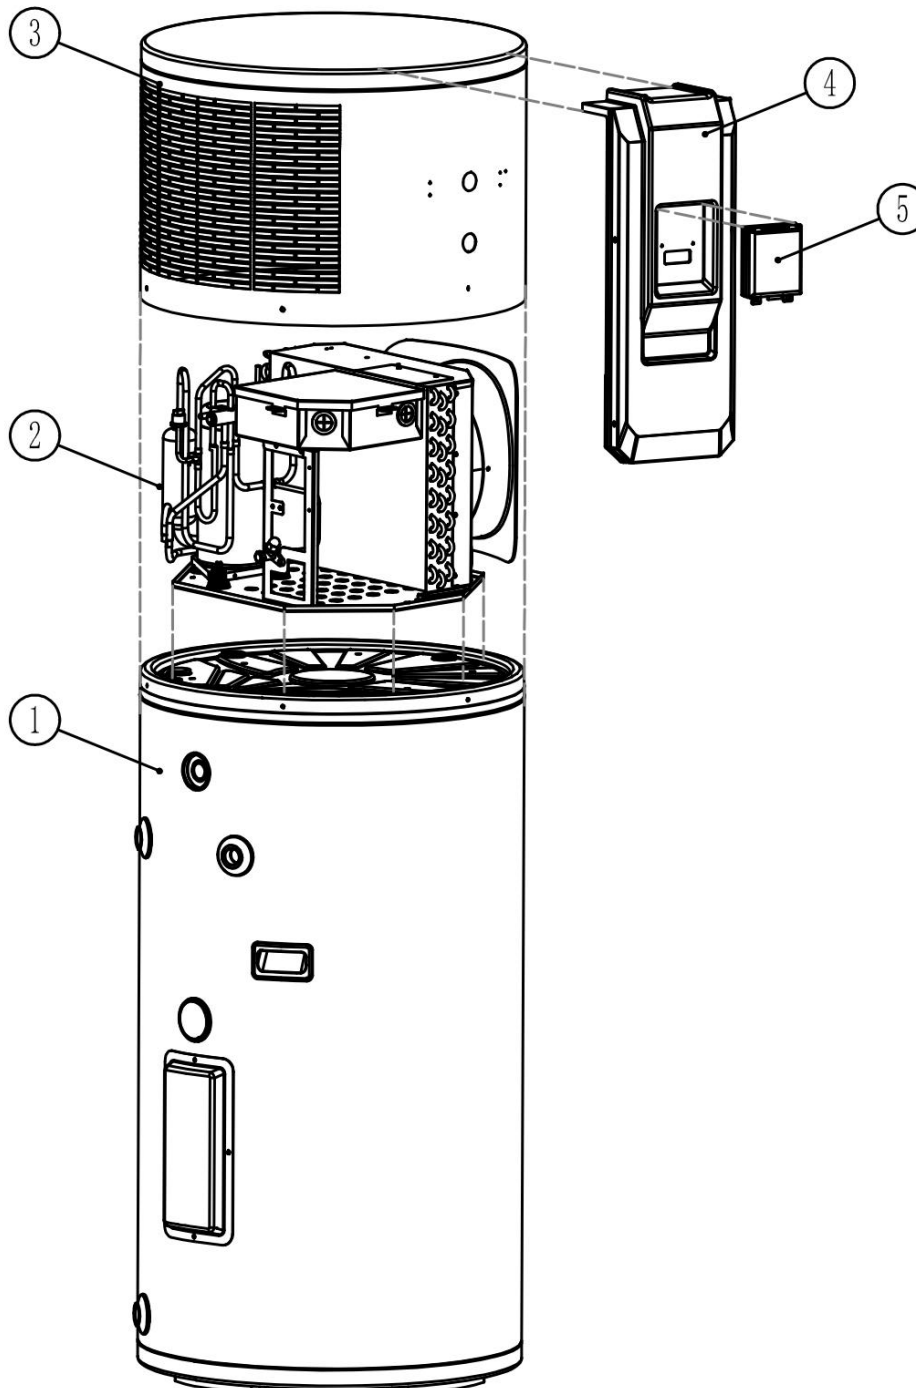


NO.	1	2	3	4	5
Name	Water tank components	Host components	Upper cover	Front decorative board	Controller

### 4.3.2 Water tank components

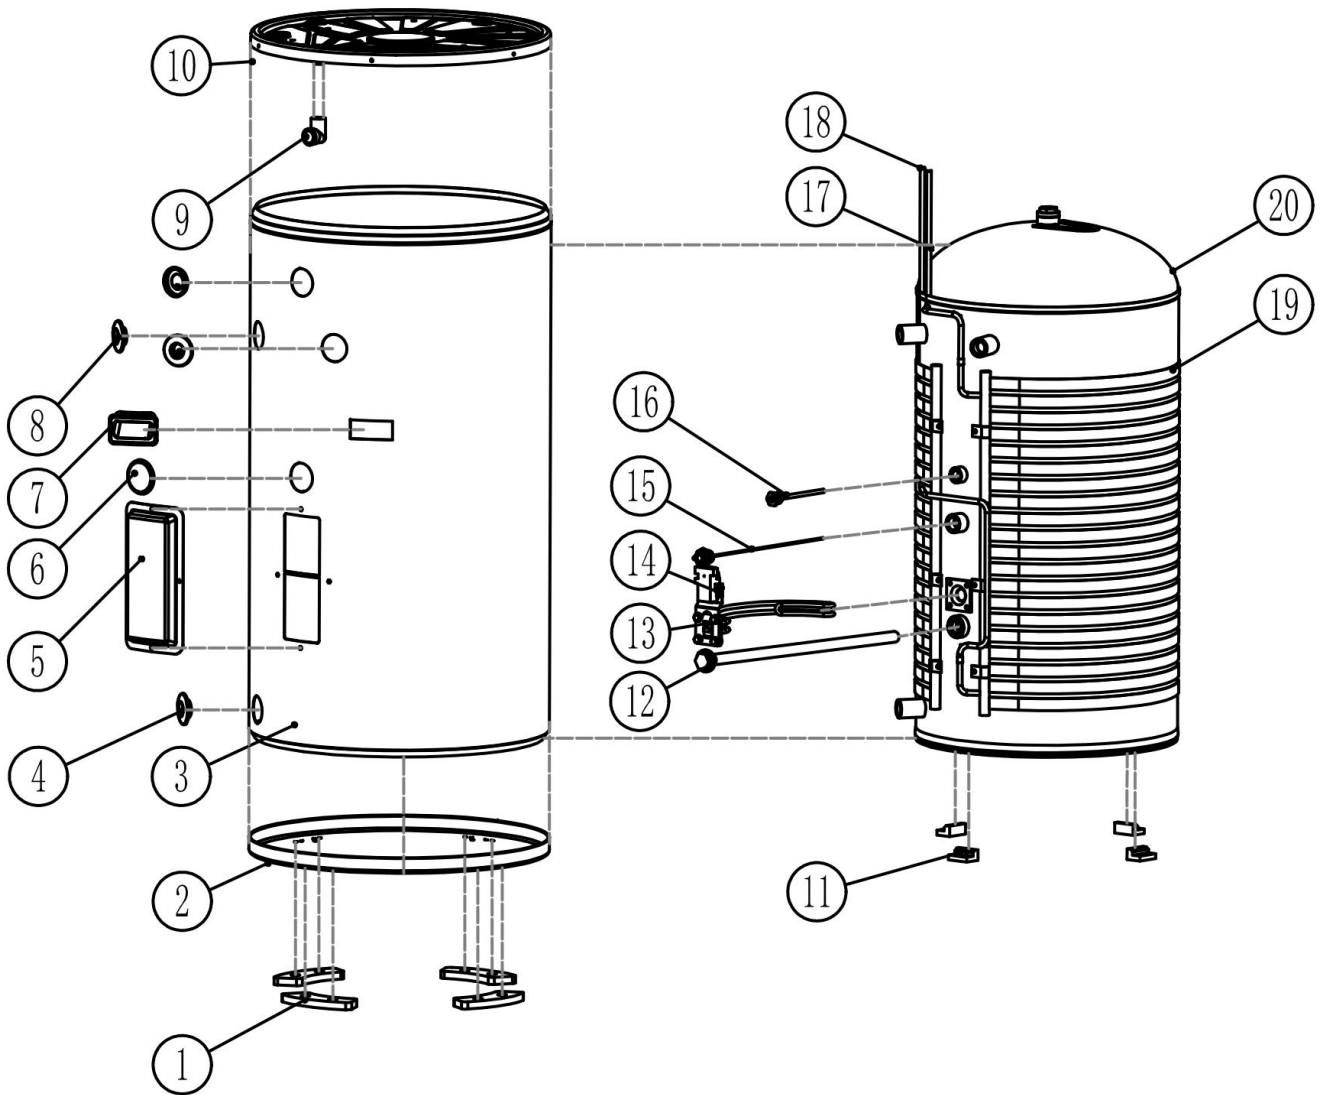


NO.	Name	NO.	Name	NO.	Name
1	Footing	8	Trim cover	15	Anode rod
2	Water tank bottom end cover	9	Condensate Water Drain Pipe	16	Temperature sensor Sleeve
3	Water tank outer sleeve	10	Water Pan	17	Microchannel intake pipe
4	Trim cover for inlet and outlet pipes	11	Fixed block	18	Microchannel liquid-out pipe
5	Protection cover for Electric heating	12	Magnesium rod	19	Microchannel
6	Trim cover	13	Electric heating	20	Liner
7	Handle	14	Electric heating thermostat		

### 4.3.3 Host components

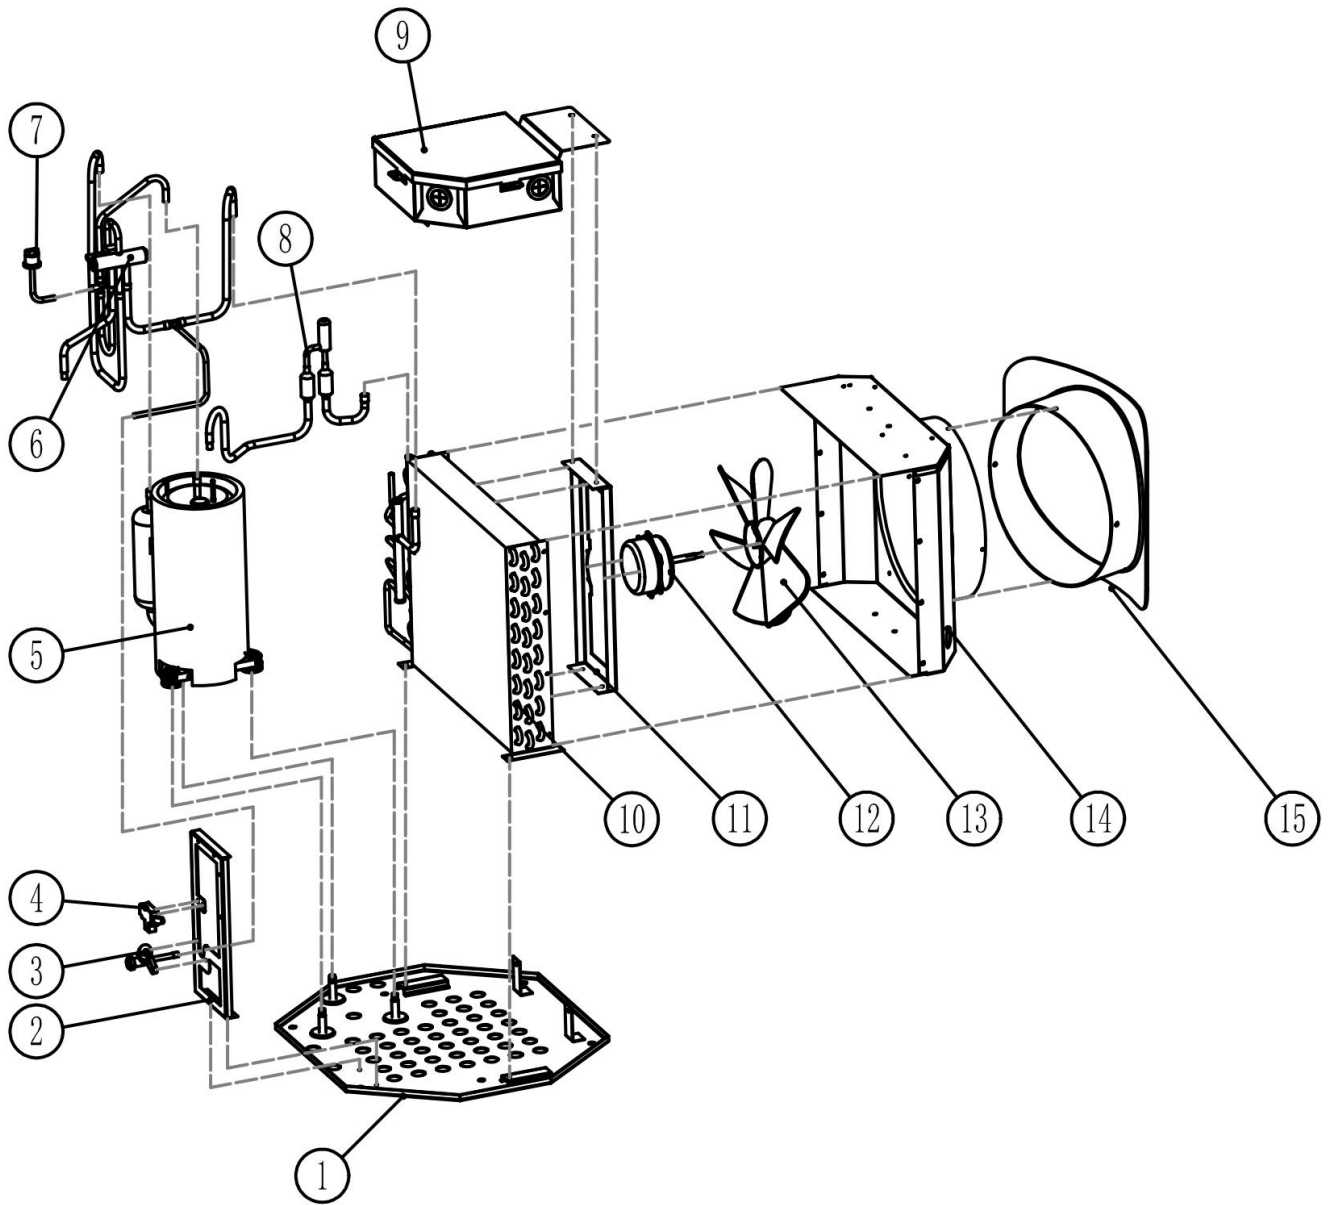





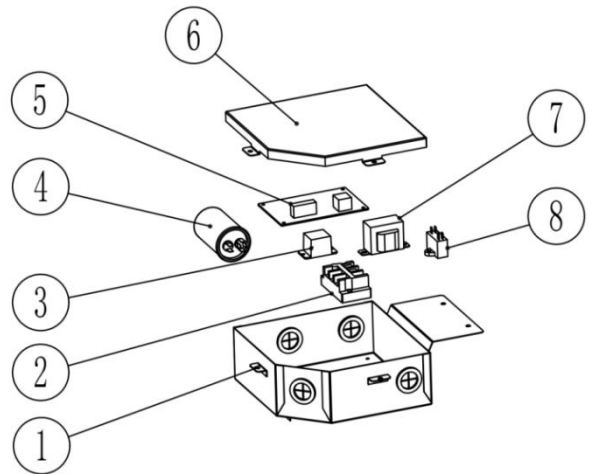





NO.	Name	NO.	Name	NO.	Name
1	Chassis	6	Four way valve	11	Fan motor support
2	Electric control box support	7	High pressure switch	12	Fan motor
3	Filling stop valve	8	Electronic expansion valve	13	Fan
4	Temperature sensing fixing clip	9	Electrical components	14	Bellows
5	Compressor	10	Evaporator	15	Sealing cover for air outlet

### 4.3.4 Electrical components





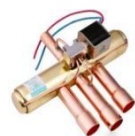





NO.	Name	NO.	Name	NO.	Name
1	Electric control box	4	Compressor capacitance	7	Transformer
2	Terminal	5	Circuit board	8	Fan capacitance
3	Relay	6	Box cover		

### 4.4 Appearance of main components

NO.	Picture	Name	NO.	Picture	Name
1		Compressor	6		Temperature sensor
2		Evaporator	7		Pressure switch
3		EEV	8		Fan motor
4		4-way valve	9		Fan
5		Solenoid Valve	10		Maintenance valve

## 5 Regular accessory

Before installing the water pipeline of the unit, please purchase the accessory listed in the table below by yourself:

Name	Picture	Type	Function
Stop valve		Diameter according to actual situation	Control water flow on/off
Ball valve		Diameter according to actual situation	Control water flow on/off
Filter		Diameter according to actual situation/40mesh	Filter impurities in water
Check valve		Diameter according to actual situation	Control the direction of water flow
Auto air vent		DN15	Remove gas from The pipeline
Water pipe and connector		-	Composition Of waterway
PTFE tape		-	Increase the sealing at the interface
Power line		See 9.1.1"Power cord specification and model"	Connecting the power supply

---

# 6 Installation requirements

## 6.1 Installation location requirements




### **Attention-Installation location requirements:**

1. When the appliance is installed on the ground, or other convenient places for installation, ensure that the installation site can withstand the weight of the unit during operation and the sum of the weight of maintenance personnel during unit maintenance, and the site needs to be leveled, so that the appliance can be stable and fixed without tilting.
2. Avoid installing this appliance indoor. If installed indoor, may cause overflow, noise or indoor temperature changes which can influence comfort, please ensure preventive measures are taken in advance.
3. The installation location should be selected with good ventilation and smooth exhaust, do not install the unit in a contaminated or dusty area. If installed indoor, the appliance must be placed, operated, and stored in a room with a floor area of at least 253 m<sup>2</sup>.
4. Ensure that the installation position of the device is oriented towards the area that is least sensitive to noise. Drainage devices must be installed near the appliance to ensure smooth drainage without accumulated water.
5. Do not install the appliance in a location where the wind energy generated by the monsoon can directly blow to the air outlet/inlet .
6. Do not approach strong electrical facilities and equipment such as fire sources and power stations; There should be no open flames or high temperature heat source facilities or equipment in the surrounding area.
7. The distance between the appliance and the area of petroleum, flammable, explosive, corrosive gases or products, or sulfur-containing compounds shall not be less than 3 meters.
8. Do not install the appliance near with strong electromagnetic radiation .
9. Try to keep the appliance out of children's reach as much as possible.
10. The most frequently used hot water outlet point and appliance should be placed as close as possible to reduce heat loss.

## 6.2 Installation space requirements


When there are obstacles around the appliance, the minimum distance between the appliance and the obstacles is as following

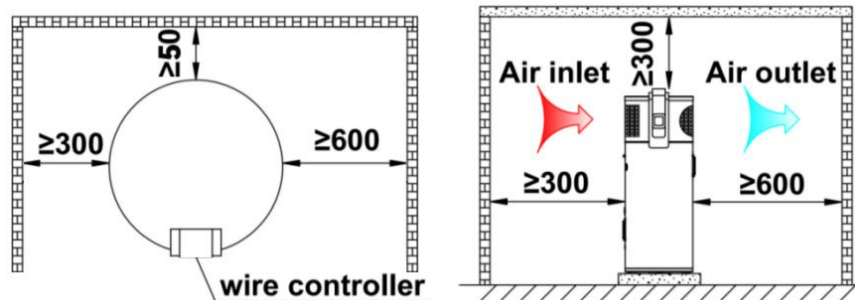

## 6.3 Transport

**Tips: Before transporting, please confirm again whether the model, number, name, color, etc. are consistent with the order. And please have qualified dealers or designated professional technicians responsible for transporting, otherwise it may cause danger.**

- \* Before unpacking, the appliance should be transported close to the installation site;
- \* When transporting the appliance, attention should be paid to maintaining verticality, and the inclination should not exceed  $30^\circ$ , do not store the unit horizontally to prevent damage to compressor and other components;
- \* Prohibit storing any items on the appliance;
- \* Do not hold the air outlet grille on the shell, as it may deform;
- \* Do not let your hands or other objects come into contact with the wind turbine blades.
- \* Do not pierce or burn the appliance.
- \* Transport of equipment containing flammable refrigerants should be complied with the transport regulations.
- \* Marking of equipment using signs should be complied with local regulations.
- \* Disposal of equipment using flammable refrigerants should be complied with national regulations.
- \* The storage of appliance should be in accordance with the manufacturer's instructions.
- \* Storage package protection should be constructed such that mechanical damage to the appliance inside the package will not cause a leak of the refrigerant charge. The maximum number of pieces of appliance permitted to be stored together will be determined by local regulations.

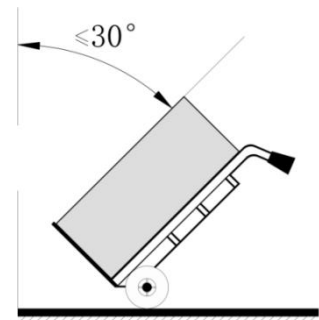


## 6.4 Installation and fixation


The appliance shall not be placed directly on the ground or on the main structure of the building, and additional equipment foundations shall be set up. Equipment foundations are generally divided into steel trough structures and concrete structures.

- (1) When using channel steel foundation, the design structure should have sufficient stiffness and strength;
- (2) When using concrete foundation, the production requirements are as follows:

A concrete base should be at least 50 mm thick the minimum dimension of the concrete base should be 700 mm x 700 mm. If the rainfall is large, the height of the foundation should be appropriately increased to ensure smooth drainage. Ensure that all four feet are supported on the concrete base being.

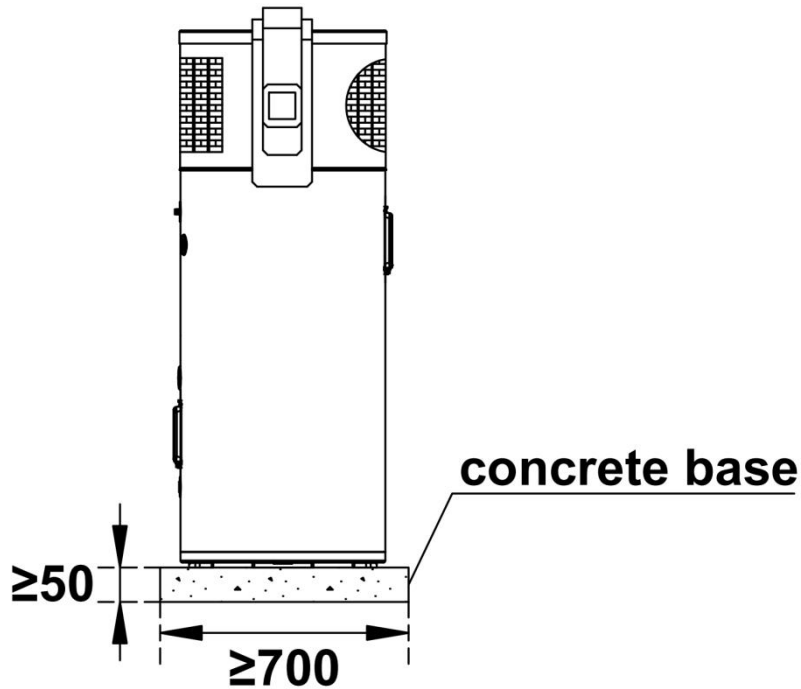

Fix the appliance as follows:

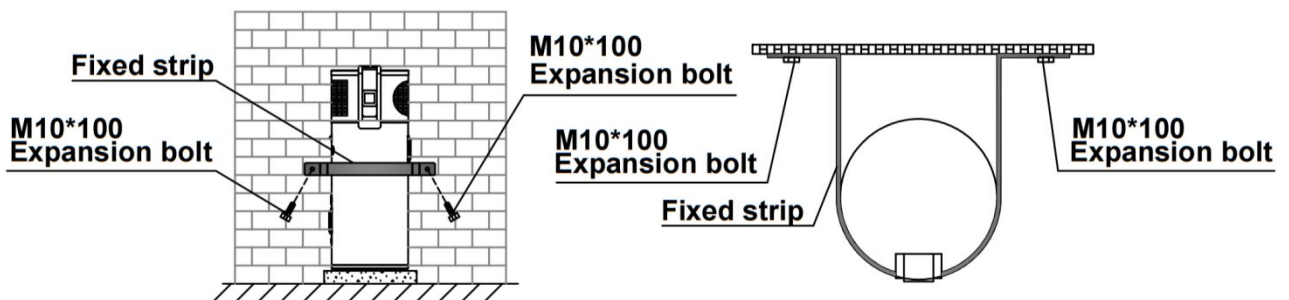

In the region which the temperature is below  $0^{\circ}\text{C}$ , the heat pump must be installed indoor or other positions where it will not be frozen for purposes of protecting connection pipe.

If used for those regions which the temperature is below  $0^{\circ}\text{C}$ , suitable measures must be taken to protect pipes if the heat pump is installed outdoors.


Installation location that experiences high temperature or long-term exposure is prohibited, as it may decrease lifetime of the product.

# 7 Installation of water pipe

## 7.1 Selection of water pipe material


It is recommended to use PPR, which should be heat-resistant and have a pressure bearing capacity that meets local technical requirements. The size of the inlet and outlet interfaces of this unit is G3/4, internal thread.

## 7.2 Installation of water pipes

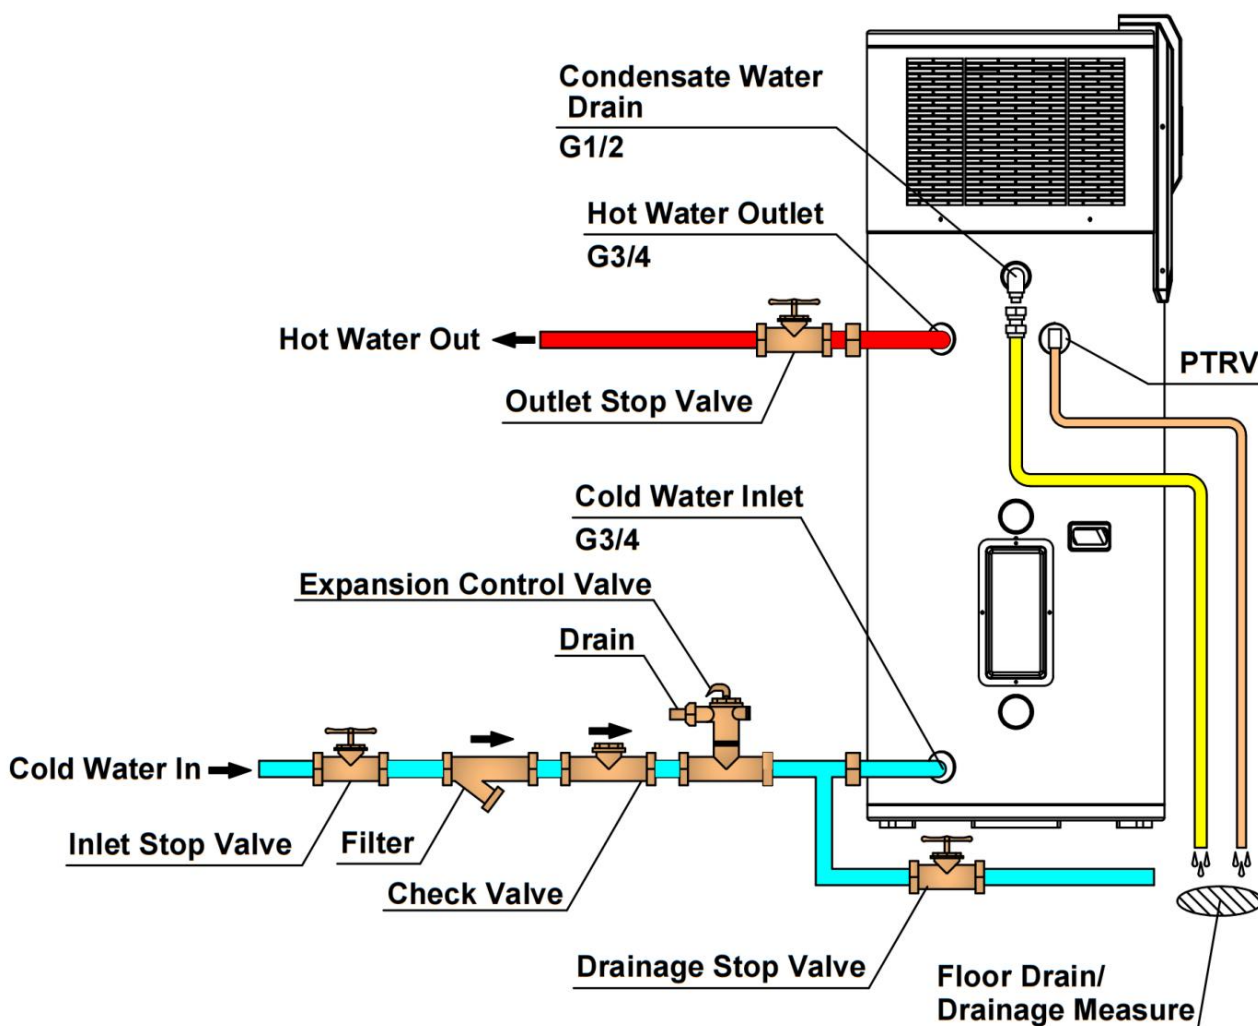

**Attention- When Water inlet pressure is below 0.15MPa, a booster pump needed to be installed to connect with inlet water pipe for purpose of obtaining larger water capacity; When inlet pressure is greater 0.50MPa, the relief valve needed to be installed to connect with inlet water pipe for purpose of keeping your water tank into a long-term working state.**

1. When connecting the inlet and outlet pipes, use two pipe wrench to adjust the pipes to ensure that they are not twisted.

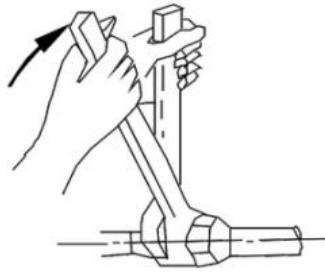

2. The system transmission and distribution pipelines and component connections should comply with the following regulations:

- 1) The bending radius of plastic pipes should not be less than 8 times the outer diameter of the pipeline, and the bending radius of composite pipes should not be less than 5 times the outer diameter of the pipeline;
- 2) The slope of pipeline laying should be 3 ‰. Equipment or valve with exhaust function should be installed at the highest point.

3. The connection between pipelines, equipment, and valves should comply with the following regulations:

- 1) The connectors should use specialized connectors that are suitable for the pipes;
- 2) When using plastic pipe hot melt connection, the working temperature of the hot melt connection should meet the technical requirements of the pipe material;
- 3) The outer surface of the hot melt connection socket and the inner surface of the socket should be scraped with a small diameter of 0.2mm. The oxygen blocking layer of the oxygen blocking pipe must be scraped during hot melt connection;
- 4) The allowable error in concentricity after hot melt connection should be 2%, and the misalignment at the interface should be less than 10% of the wall thickness;
- 5) The hot melt device should use a digital temperature dial, and the temperature should be executed according to the regulations of the pipe manufacturer;
- 6) Insulation measures should be taken between plastic pipes and composite pipes and metal supports and hangers, and direct contact should not be allowed. Non metal pads or sleeves should be added between pipes and supports, and the spacing between supports and hangers should meet the design requirements. When there are no requirements, the maximum spacing between plastic pipes and composite pipe supports should comply with the provisions of table:

<b>Diameter(mm)</b>	20	25	32	40	50
<b>Horizontal maximum spacing(mm)</b>	300	350	400	500	600
<b>Vertical maximum spacing(mm)</b>	900	1000	1100	1300	1600

- 7) The connection between system pipelines, valves, and metal connectors should be of the clamp type, sliding type, or sleeve type.

4. During the installation process of all winter engineering projects, it is strictly prohibited to inject water into the system before the unit has no normal anti freezing protection ability to prevent freezing and damage to water pipelines and end equipment. The residual water in the pipelines and equipment during the hydrostatic test must be blown clean with compressed air.

5. The system drain valve should be installed at the lowest point of the system pipeline. In cold regions, it is advisable to consider automatic drainage function. When the main engine is powered off, it can automatically empty the water in the system to prevent the system pipeline from freezing and

cracking.

6. The system shall be installed with automatic water refill valve, and the highest point shall be installed with automatic exhaust valve.
7. To conveniently maintain the unit, the outlet pipe of the unit needs to be installed with a pressure gauge.
8. Connect the drainage hose to the unit drainage outlet, and connect the end of the drainage hose to the floor drain or a drainable place.
9. The water quality flowing into the hot and cold water system must meet the following requirements. If it cannot meet the requirements, softening treatment is required:

Type	Unit	Standard	Type	Unit	Standard
PH (25°C)	/	7.5~8.0	Dissolved oxygen	mg/L	0
Turbidity	NTU	≤3	Organic phosphorus	mg/L	0
Conductivity (25°C)	μS/cm	≤200	Sulfate	mg/L	≤50
Chloride ions	mg/L	≤50	Acid consumption	mg/L	≤50
Iron ions	mg/L	≤0.3	Sulfide ions	mg/L	0
Calcium hardness	mg/L	≤80	Ammonium ions	mg/L	0
Total alkalinity	mg/L	≤200	Silica	mg/L	≤30

### 7.3 Insulation of water pipe

1. The transmission and distribution pipelines should adopt insulation measures and comply with the following regulations:
  - 1) The material and thickness of the insulation layer should be executed according to the construction drawings;
  - 2) When using non closed cell materials, a protective layer should be placed on the outer surface;
  - 3) Measures should be taken to prevent "hot bridges" or "cold bridges" at the locations where pipelines pass through walls or floors;
  - 4) If not specified in the drawings, the minimum insulation layer thickness for pipe and equipment can be selected according to the table.

Heat-insulating material		Flexible foam rubber		
	Diameter	≤DN20	DN25~DN40	≤DN50
Indoor	The minimum insulation layer thickness for pipe(mm)	25	28	32

2. Insulation materials and their products should provide product quality inspection reports and factory certificates, and their specifications, performance, and other technical indicators should comply with relevant technical standards and design documents.

### 7.4 Pressure testing, anti-corrosion, and flushing

#### 7.4.1 Pressure testing

System water pressure test: After the system installation is completed, a water pressure test should be conducted before the pipeline insulation.

1. Before the experiment, the pipeline should be fixed, the joints should be exposed, and water

---

distribution equipment should not be connected;

2. The pressure gauge is installed at the lowest point of the test pipe section, with a pressure accuracy of 0.01MPa;
3. Slowly fill the pipeline with water from the lowest point of the pipe section, fully eliminate the air inside the pipeline, and conduct a water tightness test;
4. It is recommended to use a manual pump for pressure increase. The pressure increase time should not be less than 10 minutes;
5. The pressure test should meet the following requirements:
  - (1) Steam and hot water heating systems should be subjected to a water pressure test at the top of the system working pressure plus 0.1MPa, and the test pressure at the top of the system should not be less than 0.3MPa;
  - (2) High temperature hot water heating system, the test pressure should be the working pressure at the top of the system plus 0.4MPa;
  - (3) The heating system using plastic pipes and composite pipes should undergo a water pressure test at the working pressure of the system vertex plus 0.2 MPa, and the test pressure at the system vertex should not be less than 0.4 MPa.
6. Inspection method:
  - (1) The heating system using steel pipes and composite pipes should have a pressure drop of no more than 0.02MPa within 10 minutes under the test pressure. After the pressure drops to the working pressure, it should be checked and there should be no seepage or leakage;
  - (2) The heating system using plastic pipes should have a pressure drop of no more than 0.05MPa within 1 hour under the test pressure, then reduce the pressure to 1.15 times the working pressure, stabilize for 2 hours, and the pressure drop should not exceed 0.03MPa. At the same time, there should be no seepage or leakage at all connections;
  - (3) Allow additional pressures twice in 30mins to increase to the test pressure.

### **7.4.2 Anti-corrosion**

After the system pressure test is qualified, remove the rust on the surface of the pipeline, and apply two coats of red lead anti rust paint to the pipeline, its welding points, and all supports and hangers.

### **7.4.3 Flushing**


After the pressure test is qualified, the system should be flushed and the filter and dirt remover should be cleaned until the discharged water is free of impurities such as sediment and iron filings, and the water color is not turbid, which is considered qualified.

## **7.5 PTR valve**

The valve Rated capacity: 850kPa; 10kW:Set temperature:93~99°C.

The relief valve need to be pulled one time every six months for purpose of taking calcium carbonate out and ensuring no obstacle, outlet temperature of drainage port may be high, please be careful;

Drainage pipe must be taken measures to keep temperature to prevent pipe from freezing to cause accident.The relief valve must be installed so that the drain line is facing downwards at all times with the discharge point remaining open to the atmosphere.

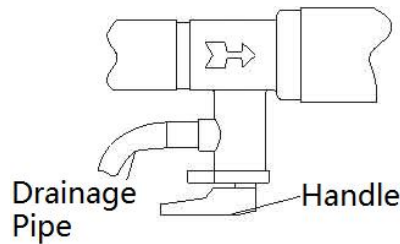

## Danger

- Do not hold down the handle of safety valve;
- Do not knock down safety valve;
- Do not plug the drainage port;
- Excretion pipe must be connected with a open drainage port.



Explosion Danger

## 7.6 Condensate Water Drain


The process of heat extraction from the atmosphere through evaporator coils results in the production of water in the form of condensation. More humid environments will produce higher rates of condensation.

To collect this water by-product a Condensate Tray is located on top of the water storage tank. Overflow from this tray runs out through the Condensate Drain.

The system comes with a pre-installed condensate drain connection joint. Drainage of condensate from joint to nearest storm water to be done by the collection into an open dish and drained via copper piping.

If not drained properly, the condensate line will attract termites as well produce algae and moss growth.

The Condensate line should be free of kinks and as and as the water is gravity fed, should only be running down to ensure the free flow of water.

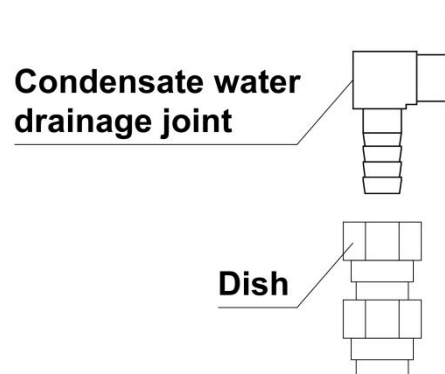

**Attention- A PVC tube is supplied which can be used to bridge the air gap between the condensate elbow and dishes. The PVC tube can also be used to drain condensate directly from condensate elbow to a storm water drainage point, if copper drainage is not required by local council regulations.**



**Warning: Connecting any pressurised line to the condensate without an gap will void warranties.**

## 8 Installation of electrical



### Attention:

1. The appliance should use a dedicated power supply, and the power supply voltage should meet the rated requirements.
2. The power supply circuit of the appliance must have a ground wire, and the ground wire must be reliably connected to the external ground wire, and the external ground wire is effective.
3. The wiring construction must be carried out by professional installers according to the diagram.
4. According to the requirements of relevant national electrical equipment technical standards, install leakage protection devices
5. The arrangement of power and signal lines should be neatly and reasonably arranged, not interfering with each other. The minimum distance should be maintained, and the distance between each other should exceed 25 millimeters. At the same time, do not come into contact with the connecting pipe and valve body
6. Use outdoor appliance leakage protector. It is not allowed to connect two wires. The signal line must use shielded wire.
7. If power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department, or similar departments.
8. Some of the connecting wires inside the appliance have been installed in the factory. User only need to connect the power line and the signal line. At the same time, check whether the connected wires are connected correctly and are not damaged or detached.
9. After all wiring construction is completed, the power can only be connected after careful inspection without any errors.
- 10 In areas where water may splash onto walls, the installation height of the power socket should not be less than 1.8 meters, and ensure that water does not splash onto the socket, and should not be installed in areas where children may reach.



### WARNING

This unit is required reliable earthing before usage, otherwise might cause death or injury




## 8.1 Connection of power cord and signal line

### 8.1.1 Specifications of power cord

Item Model	Power supply	Minimum wire diameter (mm <sup>2</sup> )		Manual switch(A)		Leakage protection device	Circuit breaker	
		Size(continuous length ≤30m)	Ground wire	Capacity	Fuse			Rated current
VIVA200-1	220V/50Hz	14AWG	2.5	≥φ1.0mm	≥20	20	Below 30mA 0.1sec	≥20A
VIVA270-1								


### 8.1.2 Power cord wiring diagram

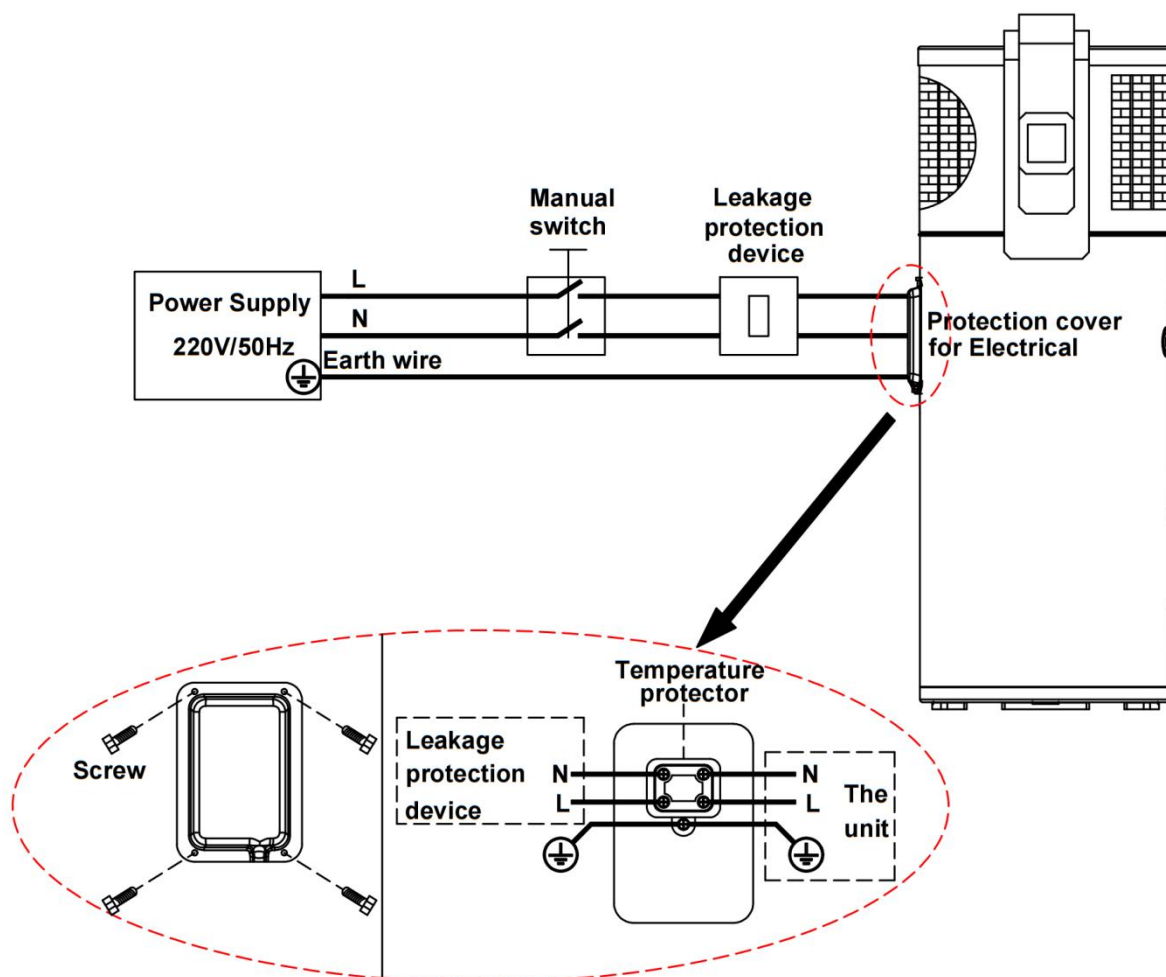

**Warning:** The power supply must have a leakage protection device installed according to the above diagram for your safety. The equipment cannot be used unless you have confirmed grounding wire is reliably connected.


Remove the four screws on the protection cover for electrical, then installed the wires as shown in the above diagram.

### 8.1.3 Signal line wiring diagram

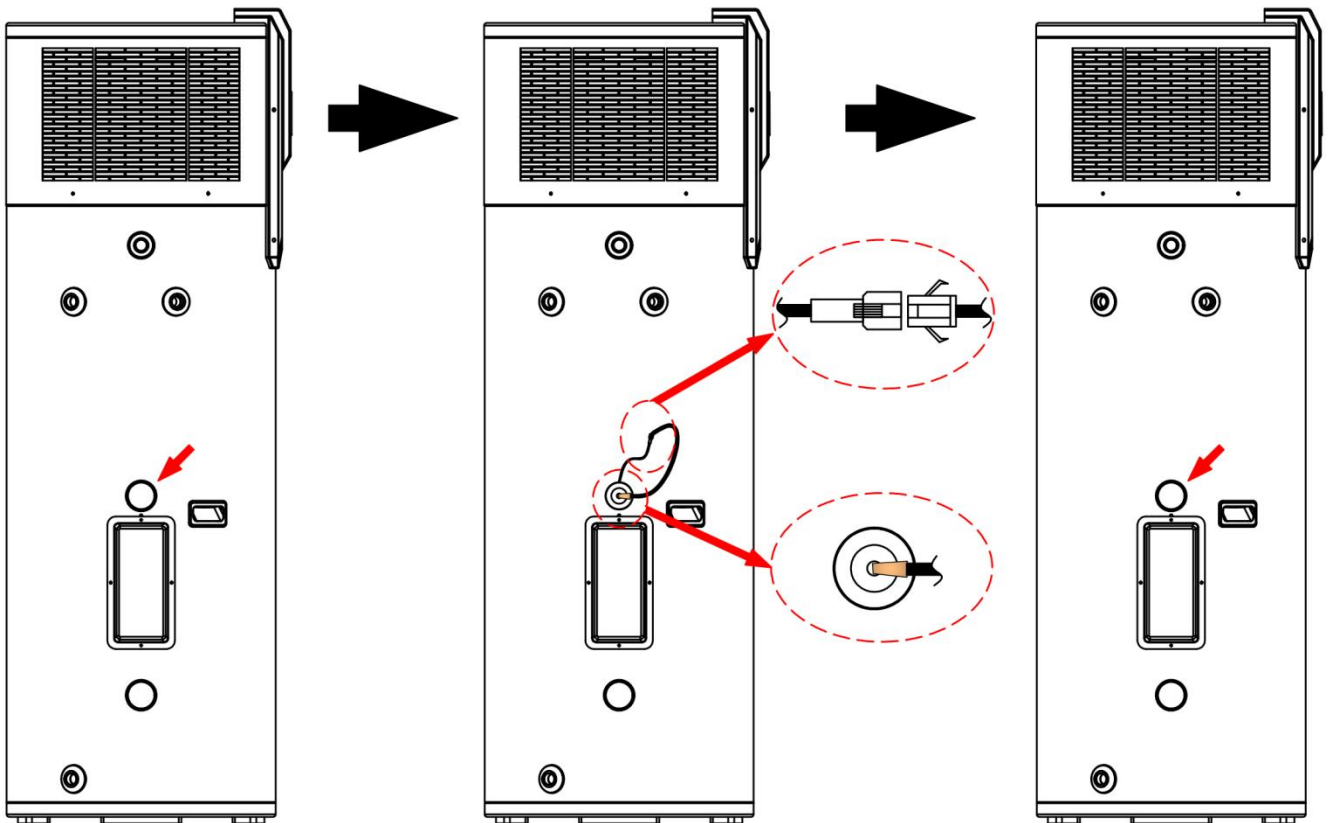


1. Remove the trim cover for temperature sensor sleeve.
2. Pull out the built-in signal line, and connect it to the signal line of temperature sensor in the attachment.
3. Insert the temperature sensor to the temperature sensor sleeve.
4. Organize the signal lines, then cover the trim cover.

## 8.2 Electrical wiring schematic

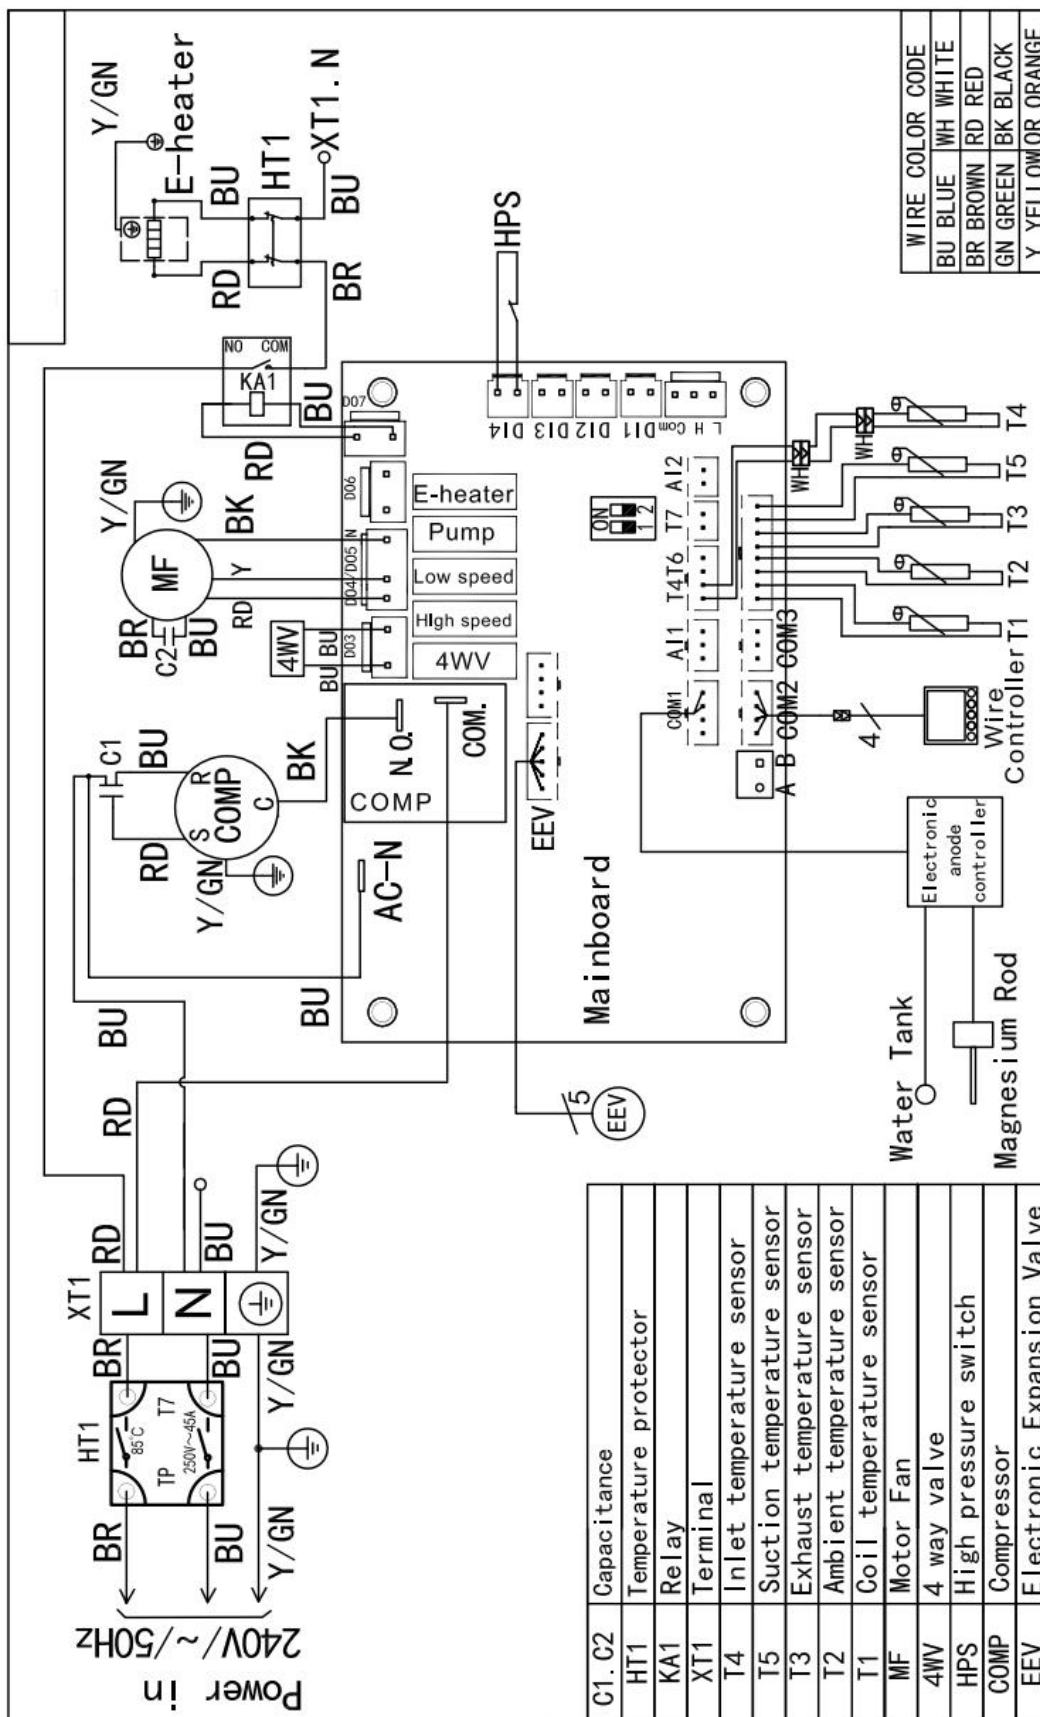

## 9 Wire controller

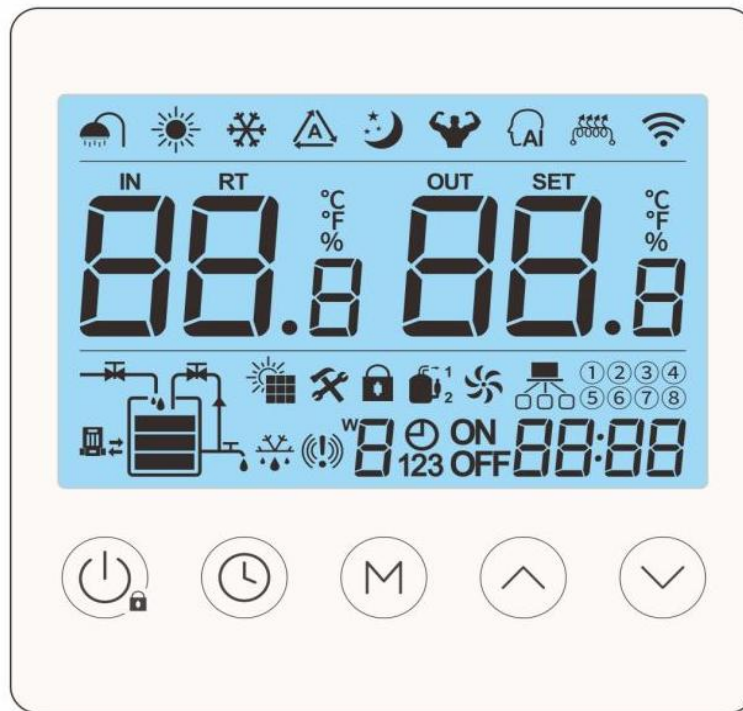






### 9.1 Controller Instruction

SYMBOL	STATUS	DEFINITION
	ON	Heat pump is on heating mode
	OFF	Heat pump is off
	ON	Water pump on.
	ON	Fan on - high speed
	ON	Fan on - low speed
	ON	Compressor on
	ON	The LCD is locked.
	ON	Error occurred. Inspection required.
	ON	AUTO mode selected. - This should be deactivated.
	ON	Cooling mode selected. -This should be changed to heating mode
	ON	Heat pump is busy defrosting
	ON	Electric heater output is on
<b>IN</b>	VALUE	Tank water temperature


<b>OUT</b>	VALUE	Heat pump outlet water temperature.
<b>88</b>	VALUE	7 segment displays for temperatures and parameter values.
<b>88:88</b>	VALUE	Current time.
<b>⌚</b>	ON	Timer function is on.
<b>ON</b>	ON	Currently in timer on-time window.
<b>ON</b>	FLASHING	Set start time for timer.
<b>OFF</b>	ON	Currently in timer off-time window.
<b>OFF</b>	FLASHING	Set stop time for timer.
<b>123</b>	ON / OFF	Timer working window 1,2 or 3 on when set, off when not set.

## 9.2 Instruction of the buttons

NO.	BUTTON	SYMBOL	FUNCTION
1	Power/ exit button		<ol style="list-style-type: none"> <li>1. Press and hold for 1 second to unlock display</li> <li>2. Press and hold for 1 second to turn on/off.</li> <li>3. In the status query mode, press to return to the home screen.</li> </ol>
2	up		<ol style="list-style-type: none"> <li>1. In home screen, press to adjust the setpoint temperature.</li> <li>2. In home screen, press and hold for 3 seconds to enter the status query mode.</li> <li>3. In status query mode, press to scroll up through parameters.</li> <li>4. In parameter set mode, press to modify parameters.</li> </ol>
3	down		<ol style="list-style-type: none"> <li>1. In home screen, press to adjust the setpoint temperature.</li> <li>2. In home screen, press and hold for 3 seconds to enter the status query mode.</li> <li>3. In status query mode, press to scroll down through parameters.</li> <li>4. In parameter set mode, press to modify parameters.</li> </ol>
4	time		<ol style="list-style-type: none"> <li>1. In the home screen, press to enter the clock setting, and press to select time "hour" and "minute" .</li> <li>2. In the home screen , press and hold for 3 seconds to start (and enter the timing time setting) / turn off the timing mode.</li> </ol>
5	set		<ol style="list-style-type: none"> <li>1. Under the main interface, press and hold for 5 seconds to enter the parameter interface;</li> <li>2. Parameters can be entered / saved under the parameter query state</li> </ol>

## 9.3 Operation Instruction

### Power On/Off

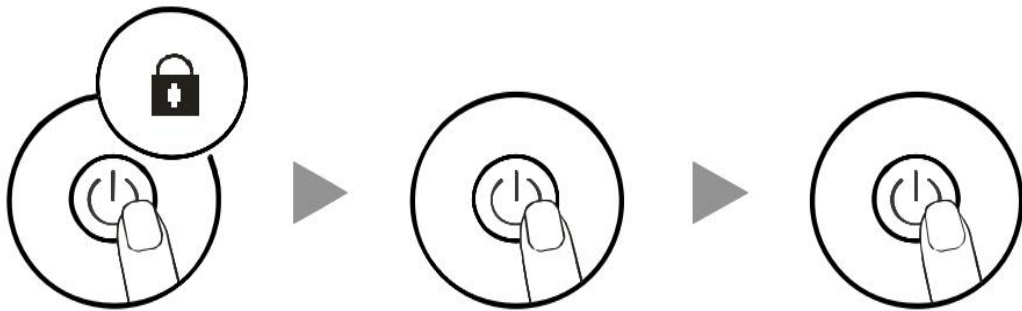


When the lock symbol is displayed, press and hold 5s to unlock the screen

Long press 2s to turn off the heat pump

Long press 2s to turn on the heat pump

### Temperature Setting

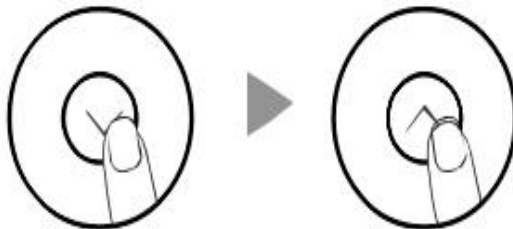


Press the up button to raise the temperature

Press the down button to lower the temperature

If there is no operation or press the on/off button within 5 seconds, the setting temperature will be saved automatically and return to the homepage

### Time Setting

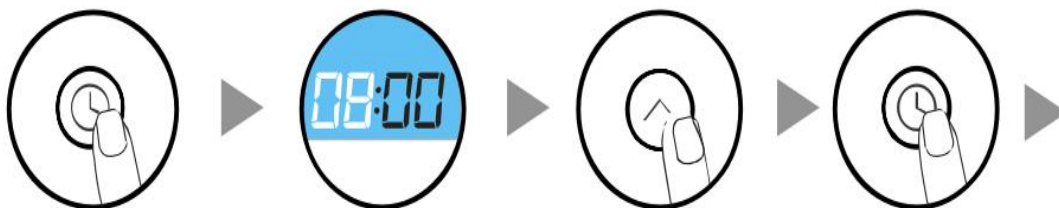


Press the clock button for 1s to enter the current clock setting

Press the clock key again, the hour area flashes

Press the up and down keys to adjust the value

Press the clock button again to enter the minute clock setting

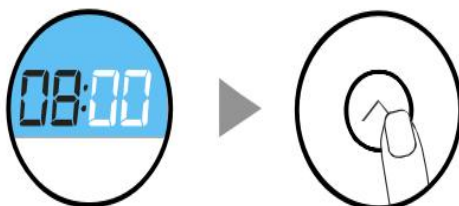

Press the clock button again, the minute area flashes

Press the up and down keys to adjust the value

If there is no operation or press the on/off button within 5 seconds, the setting temperature will be saved automatically and return to the homepage

## Scheduled Power On




Press and hold the clock key for 5s to enter the timer boot time setting



Press the clock key again, the hour area flashes



Press the up and down keys to adjust the value

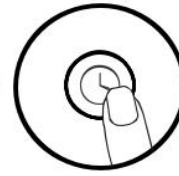

Press the clock button again to enter the minute clock setting



Press the clock button again, the minute area flashes




Press the up and down keys to adjust the value

If there is no operation or press the on/off button within 5 seconds, the setting temperature will be saved automatically and return to the homepage.

Three timings can be set.

## Status Search

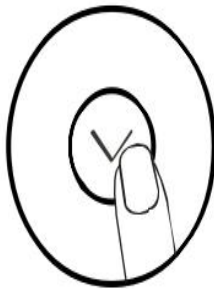

Long press the down button for 5 s to enter the status search page



Enter the status search page



Adjust the status parameter serial number in combination with the up and down keys


## 9.4 Wi-Fi Setting

The heat pump supports remote control by mobile phone. You need to download the APP in the app store and register and account to perform network distribution operations. The heat pump supports smart distribution network and AP distribution network. Under normal circumstances, it is recommended to use smart distribution network connection.


1. Search "Smart Life" in the App Store or scan the following QR code with your mobile phone to download.




2. Enter your account number and password to enter the APP main page.

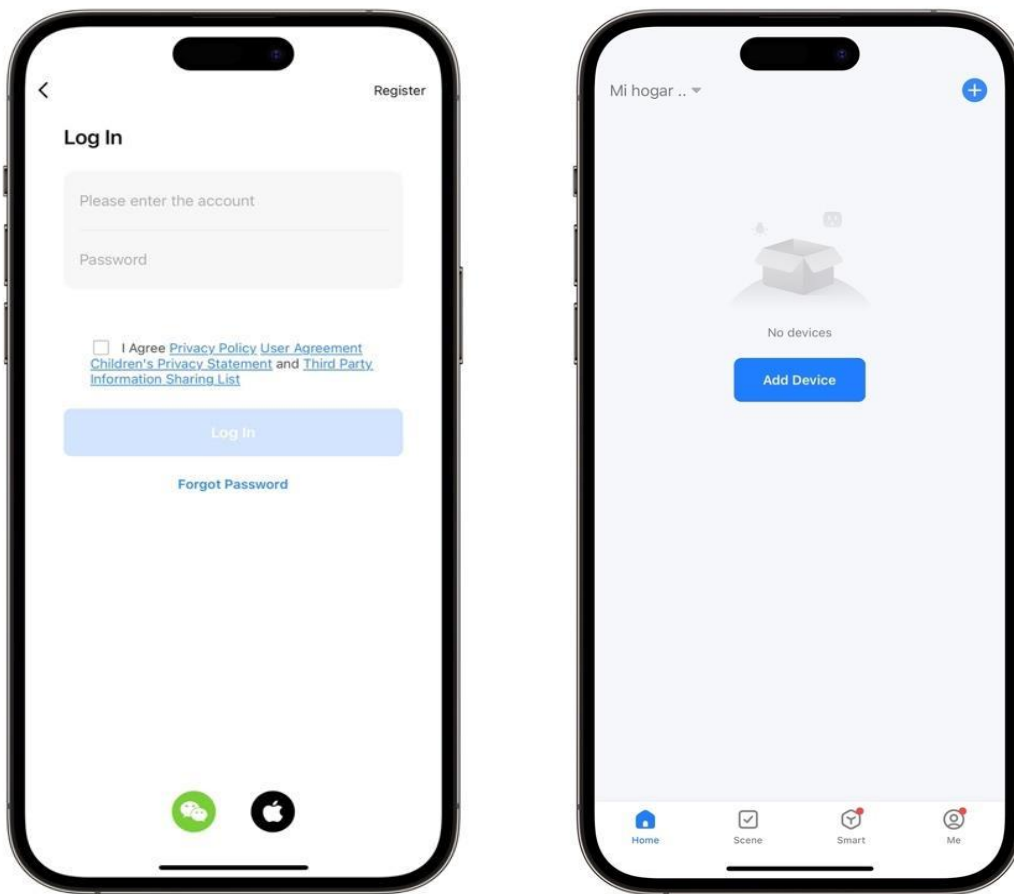

3.If you log in for the first time, you need to register an account. After registration is completed, enter your account password to enter the APP main page.

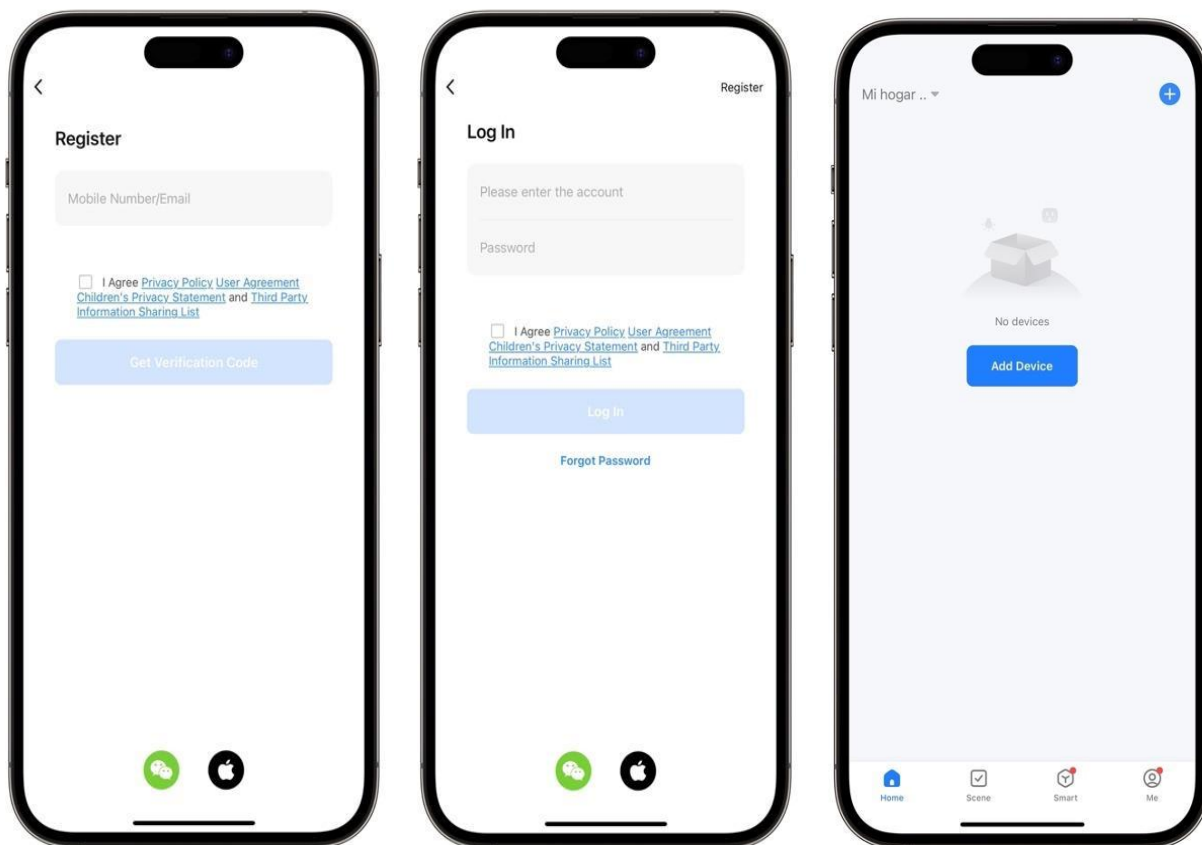

### Manual Intelligent Distribution Network

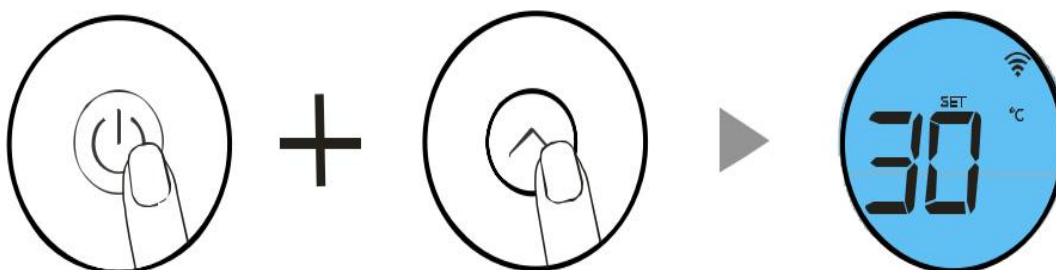

In the unlocked state, press and hold the on/off button + up button at the same time to enter the intelligent distribution mode


Wifi signal flashes  
Enter distribution network status

#### Step 1

Open the "Smart Life" APP, login to the main interface, click the "lift" icon in the upper right corner to add devices or "Add Device" in the interface, enter the device type selection, and select "Smart Heat Pump (Wi-Fi)" in the "Main Appliance" device, enter the add device interface.

#### Step 2


Select Smart Heat Pump (Wi-Fi) and enter into the Wi-Fi connection interface, enter the Wi-Fi password that the phone has been connected to (must be the same as the Wi-Fi connection to the phone), click

Next, and confirm that the line controller has selected the intelligent distribution mode, "  " icon is fast-flashing, click Confirm that the indicator is flashing, then start adding devices directly, click the "lift" icon to add devices.


Note: The icon flashes slowly when the Wi-Fi module is connected to the Wi-Fi hotspot.

### Step 3

The system prompts "Add Device Successfully" and then the network is successfully distributed. Click on the icon in this interface to change the device name, select the device installation location (living room, main bedroom), and click Finish to enter the main interface of device operation.

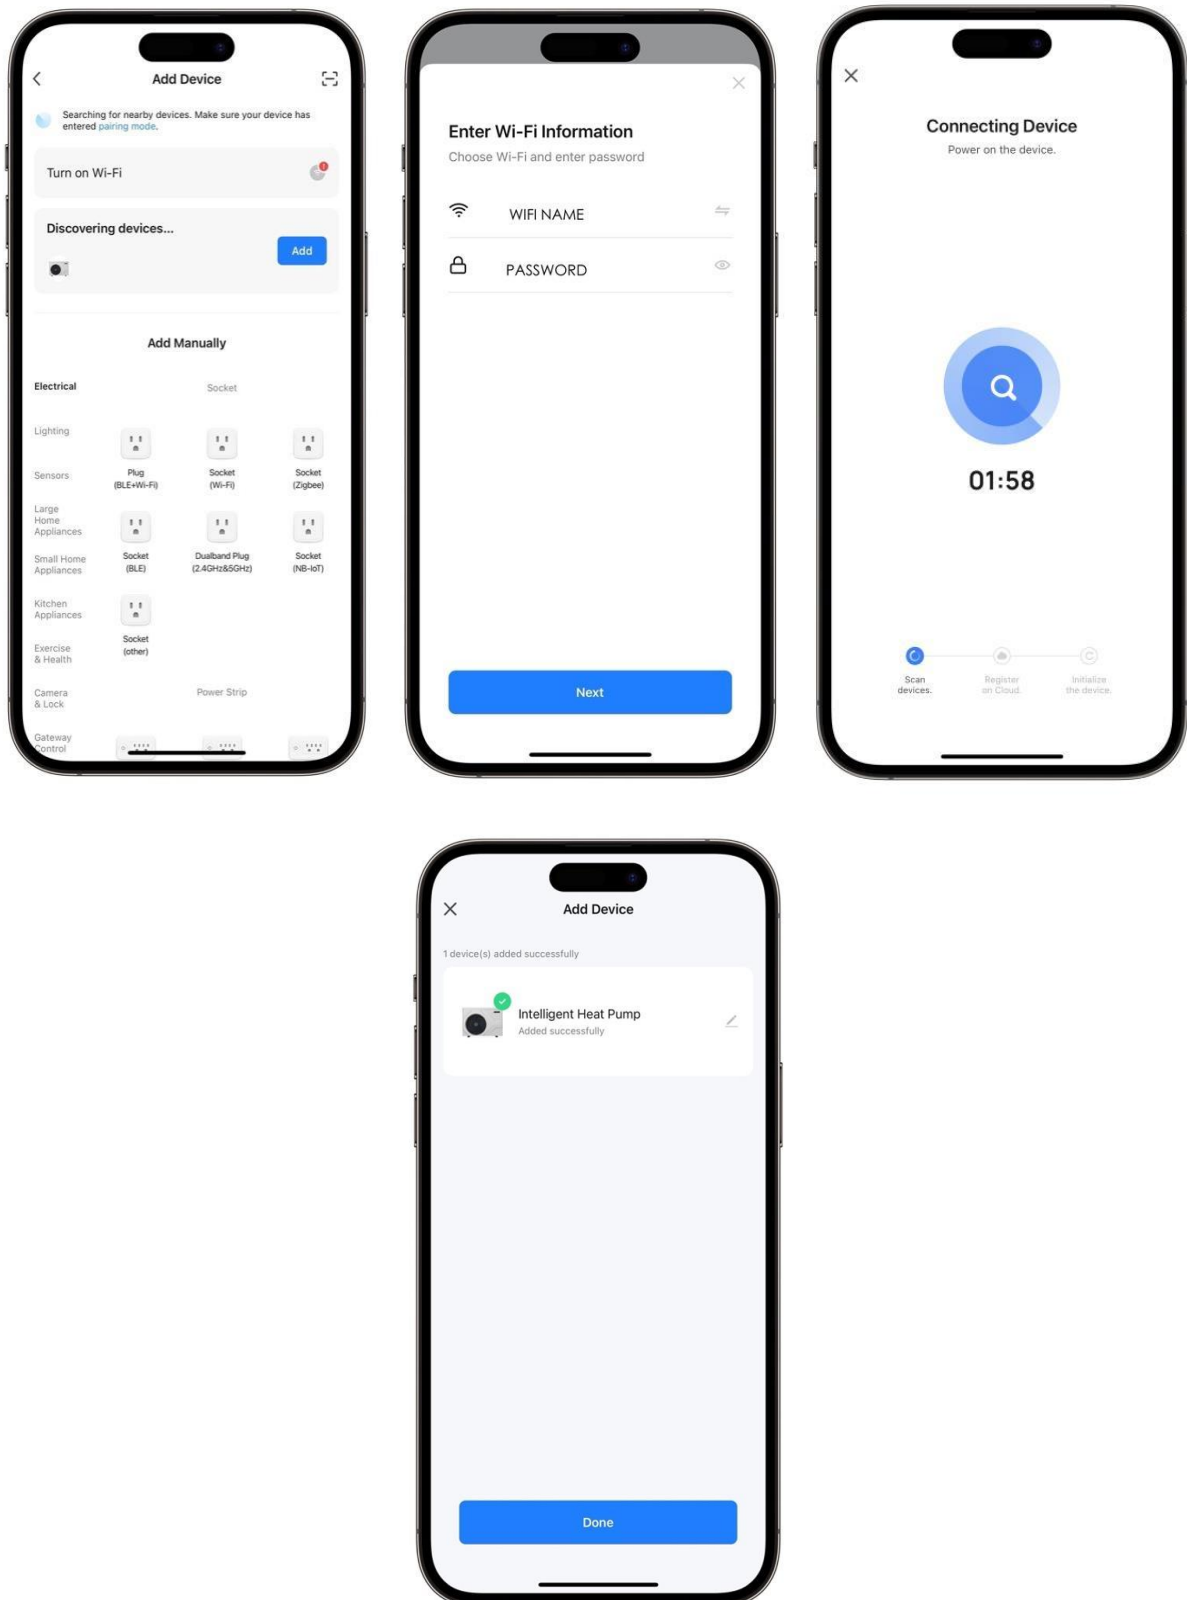

## Manual AP Distribution Network

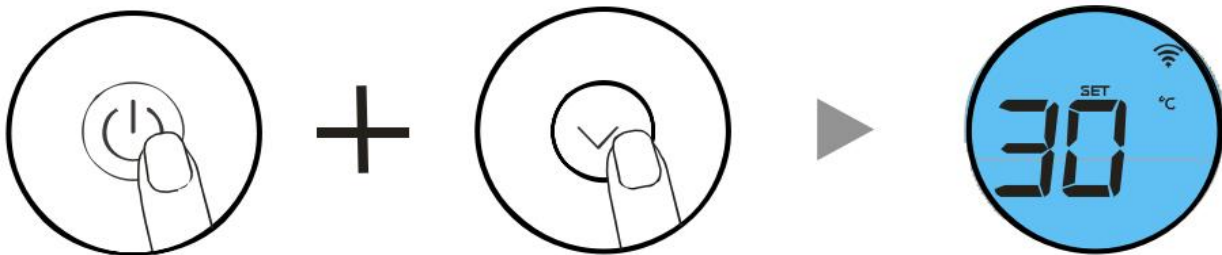


In the unlocked state, press and hold the on/off button + down button at the same time to enter the intelligent distribution mode

Wifi signal flashes  
Enter distribution network status


**Step 1 and Step 2:** Be consistent with the Intelligent Mode


### Step 3

Select innovative heat pump (Wi-Fi) after entering into the Wi-Fi connection interface, enter the phone has been connected to the (Wi-Fi) password (must be consistent with the Wi-Fi connection to the phone), click next, confirm that the line controller has selected AP distribution mode, an icon in the slow flashing state “”, click "Confirm that the indicator is in slow flashing," then connect the phone Wi-Fi to the device hotspot (as shown below), confirm that the connection hotspot is correct to continue to the next step then directly begin to connect the device interface, find the device → registers to the cloud → device initialization is complete.

Note: When the wire Wi-Fi module is connected to the Wi-Fi hotspot, the icon “” slows flashing.

**Step 4** The same as the Intelligent Mode

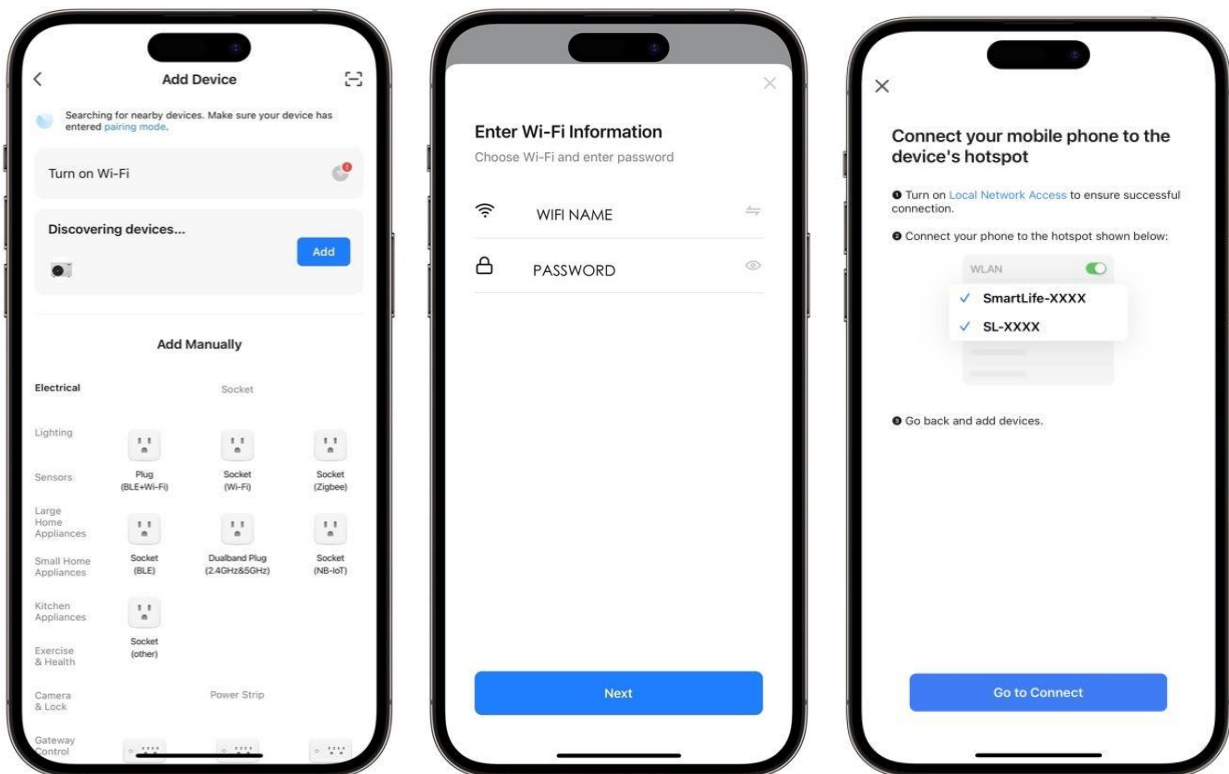

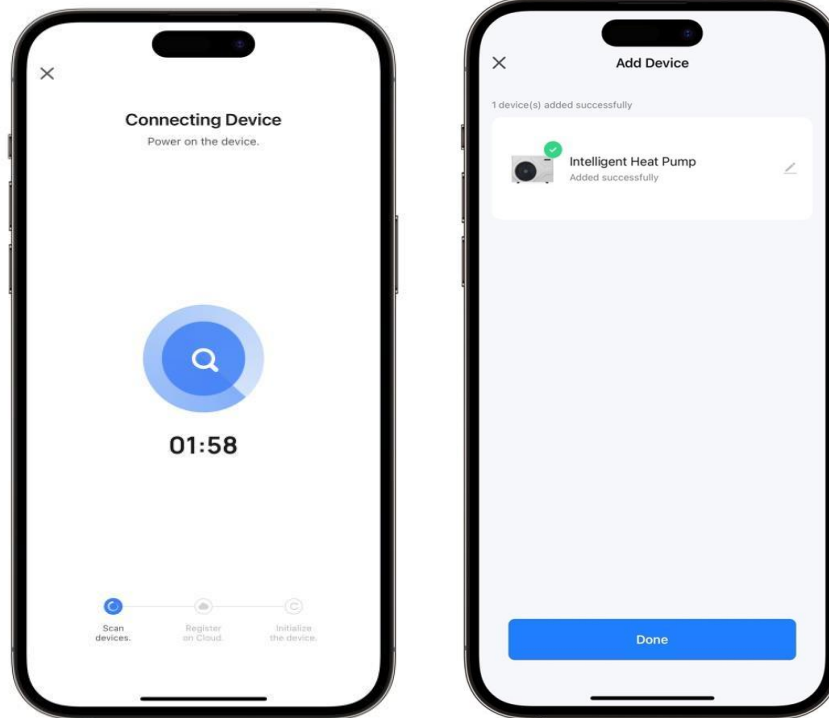

## 9.5 Software Function Operation



1. A device is automatically bound to a virtual gateway. The "My Home Heat Pump" (device name, which can be changed) operation page is displayed.  
Buy a ticket to enter the device operation page of "My Home Heat Pump" by clicking on "My Home Heat Pump" in the "All Devices" screen of smart Life.
2. Modify device name and modify device location information Click "Name" to rename the device name and "Location" to alter the device location.




## 9.6 Device Sharing

Share bound devices in the following sequence:

- 1) After successful sharing, the list is added to display the shared person.
- 2) Long-press the selected user, and the deletion interface will pop up, click "Delete"
- 3) User interface operations are as follows:
- 4) Enter the account of the shared user and click "Finish" to display the newly shared history in the list of successful sharing
- 5) The interface of the shared person is as follows. The shared device received is displayed. Click in to operate and control the device.

## 9.7 Operation Parameter Query

When power on, press “” or “” button for 3 seconds, will enter into status query interface,

press “” or “” button to query each status; Press “” button will exit status query interface

NO.	NAME	Note
00	Fluorine Cycle/Water Cycle system	0=Water Cycle; 1=Fluorine Cycle
01	High pressure switch	0=Open; 1=Close
02	Low pressure switch	0=Open; 1=Close
03	Water flow switch	0=Open; 1=Close
04	EEV open	Measured value
05	Coil temp.	Measured value
06	Ambient temp.	Measured value
07	Suction temp.	Measured value
08	Exhaust temp.	Measured value
09	Water inlet temp.(Water tank)	Measured value
10	Water outlet temp.	0=OFF: 1=ON
11	Compressor	0=OFF: 1=ON
12	4 way valve	0=OFF: 1=ON
13	High fan speed	0=OFF: 1=ON
14	Low fan speed	0=OFF: 1=ON
15	Circulation pump	0=OFF: 1=ON
16	Heating element	0=OFF: 1=ON
17	Compressor working time before defrosting	Measured value
18	Link switch	0=Open; 1=Close
19	Program code	Show the code

## 9.8 Fault code and solution

Error code	Error description	Possible causes
E05	High gas pressure protection	Water flow restriction/Water pump is faulty/Dirty heat exchanger/Heat pump setpoint set too high/Water pressure too low/High pressure switch broken or connection is faulty.
E06	Low gas pressure protection	Refrigerant system leak/Defrosting function is disabled/Low pressure switch broken or connection is faulty.
E09	Communication failure	Display cable connection faulty/Strong magnetic field/PCB is faulty.
E12	Discharge gas temperature too high	Heat exchangers dirty or gas leak.
E15	Tank temperature sensor failure	Sensor failure/Connection is faulty.
E16	Evaporator coil temperature sensor failure	Sensor failure/Connection is faulty.
E18	Discharge gas temperature sensor failure	Sensor failure/Connection is faulty.
E21	Ambient temperature sensor failure	Sensor failure/Connection is faulty.
E22	Return water temperature sensor failure	Sensor failure/Connection is faulty.
E23	Outlet water temperature too low protection	Heat pump freeze protection/Faulty 4-way valve.
E27	Water outlet temperature sensor failure	Sensor failure/Connection is faulty.
E29	Suction temperature sensor failure	Sensor failure/Connection is faulty.
E32	Outlet water temperature too high protection	Target temperature set too high/Insufficient water flow.

# 10. Test operational

## 10.1 Note



### Attention:

1. The trial operation needs to ensure that the entire system is filled with water and air is removed.
2. Only after confirming that all valves are in the correct on /off state can trial operation be carried out.
3. Trial operation can only be carried out after electrical safety inspection.
4. Absolute prohibition of forced operation.

## 10.2 Confirmation items before test operational


In order to avoid accidents and dangers during trial operation and ensure safety and reliability during trial operation, it is necessary to confirm the following items before trial

Type	Inspection Content	Yes or No
Installation of appliance	Is the appearance intact and free of scratches	
	Is the installation space meet the requirements	
	Does the foundation height meet the requirements	
	Does the air inlet and outlet meet the requirements	
	Are rain, sun, snow, and strong wind protection measures implemented	
Installation of water pipe	Is the pipeline well sealed and leak free after water injection	
	Is the pipeline cleaned and free of impurities	
	Are drainage measures in place and ensure smooth drainage	
	Is the pipeline insulation complete	
	Is the air inside the pipe completely discharged	
	Is the pipeline valve in the correct open/ closed state	
	Is an air vent installed at the highest point and other high points of the pipeline	
Is a drainage valve installed at the lowest point of the pipeline		
Installation of electrical	Does the power supply meet the requirements of the unit	
	Can the leakage protector effectively operate	
	Is the ground wire correctly connected	
	Is the power wiring intact and undamaged	

## 10.3 Test operational

After passing the inspection according to the above list, please operate in the following order:

1. Feeding water:when using the appliance for the first time (or reusing it after the tank is emptied), before connecting the appliance to power,please make sure the tank is full of water. Water feeding method is as per below picture.

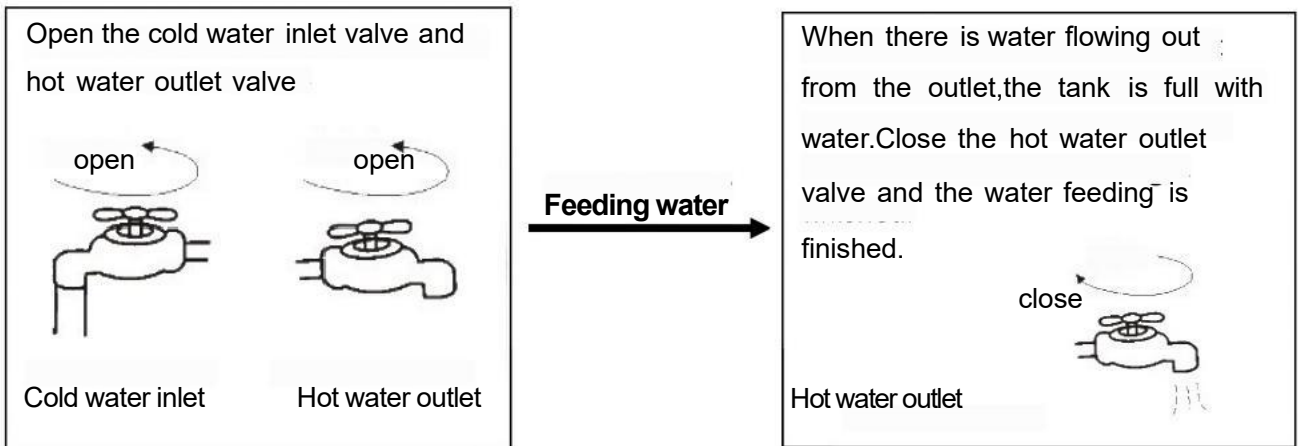

**!** **Attention:**

**Operation without water in water tank may result in the damage of auxiliary E-heater.Due to such damage, manufacturer will be liable for anydamages caused by this issue.**

2. Connect the appliance to power. Then the screen will turn on,which shows that the unit is connected to power.

Control the operation of theappliance with a wire controller and check the following items according to the manual: (If there is a fault, please troubleshoot it according to the fault and its cause explained in the manual)

Type	Inspection Content	Yes or No
The operation of the appliance	Is the wire controller working properly	
	Are the function keys of the wire controller working properly	
	Is the indicator light working properly	
	Is there any abnormal vibration or sound in the unit	
	Does it work properly in each mode	
The operation of the water system	Is the drainage normal	
	Is the outlet water temperature normal	
	Is there any water leakage in the pipeline	
The operation of the electrical system	Is the air vent on the pipeline venting properly	
	Does the power supply meet the requirements of the unit	
	Is the ground wire connected securely	

---

## 10.4 Operational requirements



### **Attention:**

- 1. The trial operation of the unit must be carried out by professional technical personnel to avoid danger or damage to the unit.**
- 2. Please do not cut off the power supply of the host when it needs to be shut down for a short period of time of day and night.**

## 10.5 Operation related instructions

### 10.5.1 Defrosting during heating operation

During heating operation, the main unit may experience frosting. In order to improve heating efficiency, automatic defrosting operation is carried out (about 2-10 minutes).

### 10.5.2 Regarding power outages

- (1) If there is a power outage during operation, stop all operations.
- (2) After a power outage, the unit will automatically detect the water level and temperature of the water tank, automatically start the unit or standby, without the need for manual startup.
- (3) In case of accidental operation caused by lightning or radio during operation, please cut off the manual power switch, turn it on again, and press the ON/OFF button again.

### 10.5.3 Regarding leakage current action protectors

- (1) The unit itself has a leakage protection switch, but during installation, users are also required to install a leakage protection switch between the power supply and the unit. So when there is no power outage but the unit cannot operate, please check these two leakage protection switches. When operating the protection switch inside the unit, the first step is to confirm that the protection switch installed by users outside the unit is in the disconnected state to avoid electric shock.
- (2) After the leakage current action protector on the electrical control box has been running for a period of time (usually one month), the test button needs to be pressed in the closed and energized state; When there is an abnormality and no accident cause is found after inspection, it is allowed to test power once; If there is no action, the cause should be identified and the fault should be identified. If necessary, action characteristic tests should be conducted. After inspection, it is confirmed that the leakage current action protector itself has malfunctioned, and it should be replaced or repaired in a timely manner.

### 10.5.4 Regarding the power-off memory function

Before each power outage, the line controller automatically remembers the on/off status of the unit. After powering on again, the line controller will send a signal to the unit according to the memory state before powering off, ensure that the unit can still operate according to the user's original setting after abnormal power outage and recovery.

---

# 11. Maintenance and solution

## 11.1 Maintenance

1. All safety protection devices inside the unit are set before the product leaves the factory. Please do not adjust or remove them on your own to avoid damage to the unit.
2. Do not stack debris on the unit, and keep the surroundings dry, clean, and well ventilated.
3. Regularly clean the filters in the water system to avoid blockage that may cause unit protection or damage, and regularly check whether the water system's water replenishment device is functioning properly.
4. When the winter ambient temperature is below zero degrees Celsius, it is strictly prohibited to cut off the power supply, otherwise the anti freezing protection of the unit will fail.
5. When the unit is not in use for a long time, water should be drained from the unit and pipeline system, including the water tank.
6. If the hot water system is not used for two weeks or more, a quantity of highly flammable hydrogen gas may accumulate in the water heater. To dissipate this gas safely, it is recommended that a hot tap be turned on for several minutes or until the discharge of gas ceases. Use a sink, basin, or bath outlet, but not a dishwasher, clothes washer, or other appliance. During this procedure, there must be no smoking, open flame, or any electrical appliance operating nearby. If hydrogen is discharged through the tap, it will probably make an unusual sound as with air escaping.
7. Do not manually start or stop the unit frequently, and do not manually close the manual regulating valve of the water system while the unit is running.
8. Regularly inspect the working condition of various components of the unit, and also inspect the internal pipeline joints of the unit.
9. When the unit malfunctions and the user is unable to solve it, please contact us in a timely manner so that someone can be sent for repair in a timely manner.
10. Attention should be paid to drainage: if not used for a long time in winter or if there is a power outage for a long time, the water in the water system must be drained completely; Before draining, ensure that the unit is powered off while in standby mode, open the water system drain valve, and at the same time, open the unit drain valve.
11. Each device has been matched with one anode rod, and anode rod will be slowly consumed during the process of protecting inner tank and extending use life. Under some water circumstance, anode rod and water can rise reaction, hot water will be quickly corroded and rise leakage when anode rod has been used up. We suggest check insulation materials every one year, if anode rod is used up, you can inquiry local service center or technical department to acquire a new one.

## 11.2 Information for service personnel

### 1. Checks to the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

### 2. Work procedure

Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable

---

gas or vapour being present while the work is being performed.

3. General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

4. Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

5. Presence of fire extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO<sub>2</sub> fire extinguisher adjacent to the charging area.

6. No ignition sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

7. Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

8. Checks to the refrigeration equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- The charge size is in accordance with the room size within which the refrigerant containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected

---

against being so corroded.

#### 9. Checks to electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used.

This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- \*That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- \*That there no live electrical components and wiring are exposed while charging, recovering or purging the system;
- \*That there is continuity of ground bonding.

### 11.3 Repairs to sealed components

1. During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
2. Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc. Ensure that apparatus is mounted securely. Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications. NOTE: The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

### 11.4 Repair to intrinsically safe components

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.

Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating. Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

### 11.5 Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

---

## 11.6 Detection of flammable refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

## 11.7 Leak detection methods

The following leak detection methods are deemed acceptable for systems containing flammable refrigerants.

Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)

Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed/ extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

## 11.8 Removal and evacuation

When breaking into the refrigerant circuit to make repairs - or for any other purpose conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

\*Remove refrigerant;

\*Purge the circuit with inert gas;

\*Evacuate;

\*Purge again with inert gas;

\*Open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders. The system shall be "flushed" with OFN to render the unit safe. This process may need to be repeated several times. Compressed air or oxygen shall not be used for this task. Flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe-work are to take place.

Ensure that the outlet for the vacuum pump is not close to any ignition sources and there is ventilation available.

## 11.9 Charging procedures

In addition to conventional charging procedures, the following requirements shall be followed.

- 
- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them.
  - Cylinders shall be kept upright.
  - Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
  - Label the system when charging is complete (if not already).
  - Extreme care shall be taken not to overfill the refrigeration system.

Prior to recharging the system it shall be pressure tested with OFN. The system shall be leak tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

## **11.10 Decommissioning**

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure ensure that:
  - \*Mechanical handling equipment is available, if required, for handling refrigerant cylinders;
  - \*All personal protective equipment is available and being used correctly;
  - \*The recovery process is supervised at all times by a competent person;
  - \*Recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with manufacturer's instructions.
- h) Do not overfill cylinders. (No more than 80 % volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

## **11.11 Labelling**

Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

## **11.12 Recovery**

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

### 11.13 Error & Approaches

Error	Reason	Approach
The outlet water is cold; The screen is dark	<ol style="list-style-type: none"> <li>1. The plug is not plugged properly</li> <li>2. The temperature controller is on the lowest temperature control state;</li> <li>3. The temperature controller is damaged</li> <li>4. The circuit board of the indicator lamp is damaged</li> </ol>	<ol style="list-style-type: none"> <li>1. Plug in properly.</li> <li>2. Set the temperature of the controller in higher state.</li> <li>3. Inform the service department</li> </ol>
No water out from the hot water outlet	<ol style="list-style-type: none"> <li>1. The tap water is cut off</li> <li>2. The water pressure is too low</li> <li>3. The tap water inlet valve is closed</li> </ol>	<ol style="list-style-type: none"> <li>1. Waiting for the restore of the tap water.</li> <li>2. Wait and use when the water pressure is raised</li> <li>3. Open the tap water inlet valve</li> </ol>
Water leakage	Bad tightness in the connecting points between pipes.	Improve the tightness of the connecting points

---

## Warranty Information

VIVA HEATING AND AIR warrants this heat pump to the original purchaser against defects in materials and workmanship under normal use and service, subject to the following terms:

- 5-year warranty on the tank and heat pump.
- 2-year warranty on labour.

Terms and conditions apply. Refer to our website for full details:

This warranty does not cover damage resulting from:

- Accidents, misuse, or improper handling.
- Lack of reasonable maintenance or unauthorised modifications.

Under no circumstances shall VIVA HEATING AND AIR be liable for incidental, consequential, or indirect damages arising from breach of this warranty, whether express or implied.

For complete warranty terms, visit:

### **VIVA HEATING AND AIR**

ABN: 73679336602

Se 2 321-323 CHAPEL ST PRAHRAN VIC, 3181

[vivaheat.com.au](http://vivaheat.com.au)

The information in this document is current as of the publication date. Product specifications and warranty terms may be updated periodically. For the latest details, please refer to our official website or contact our customer service team.

202504